


231455 - Door lock Z-TF entry92 BS65 PC 2 MF-HO K+605 HH 1.050 silver square spindle =8 F-2.000x16 fixed PT

Technical drawing

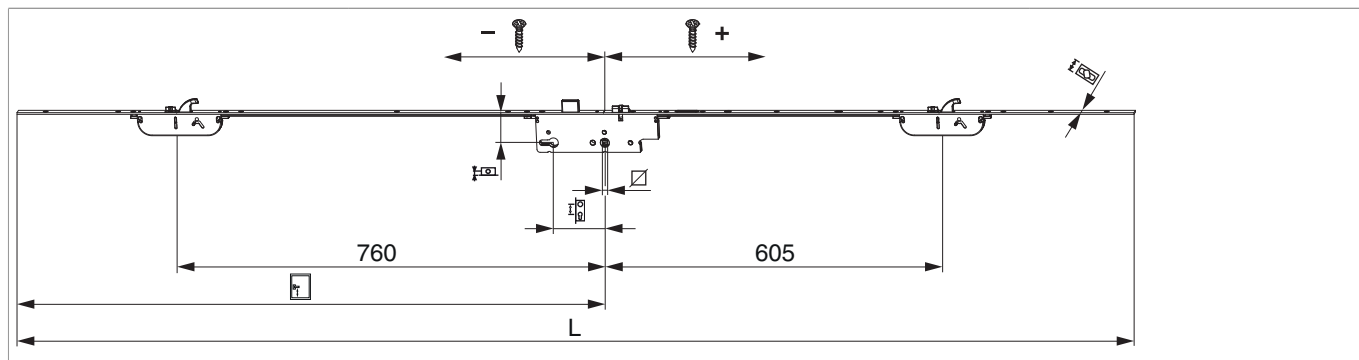

fixed	silver	92	65	8	1.050	1.800 - 2.000	16	L	5			

Screw position table


Nº													
231455	11	-1.000	-870	-650	-371	-172	176,5	309	495	715	800	900	



**231455 - Door lock Z-TF entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x16 fixed PT**

Routing

Lock cases

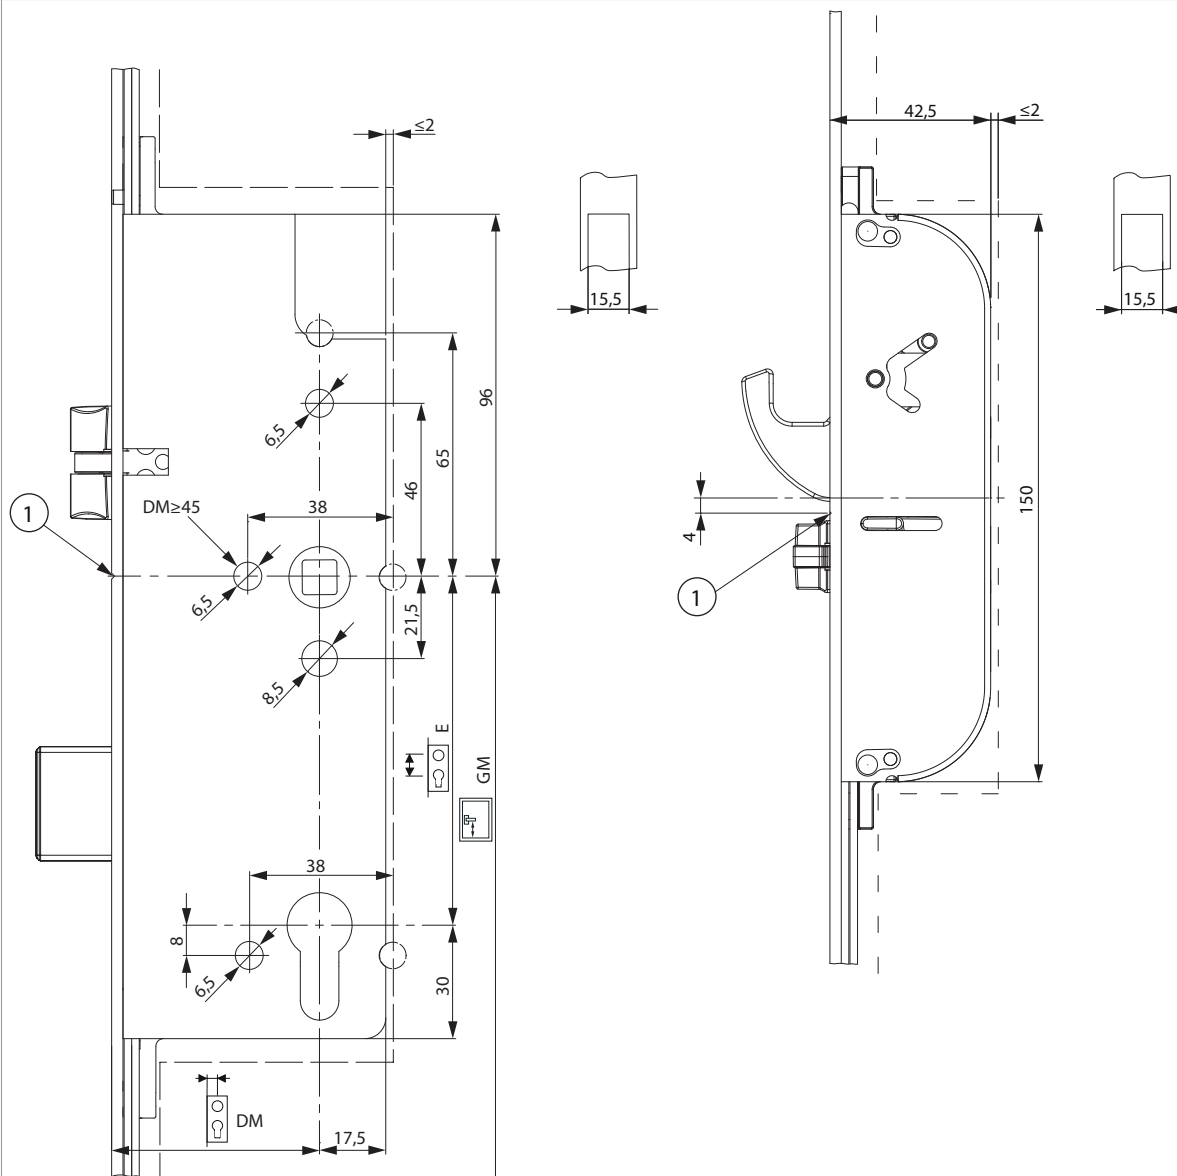


1) faceplate notch



231455 - Door lock Z-TF entry92 BS65 PC 2 MF-HO K+605 HH 1.050 silver square spindle =8 F-2.000x16 fixed PT

Latch conversion


Cranked latch

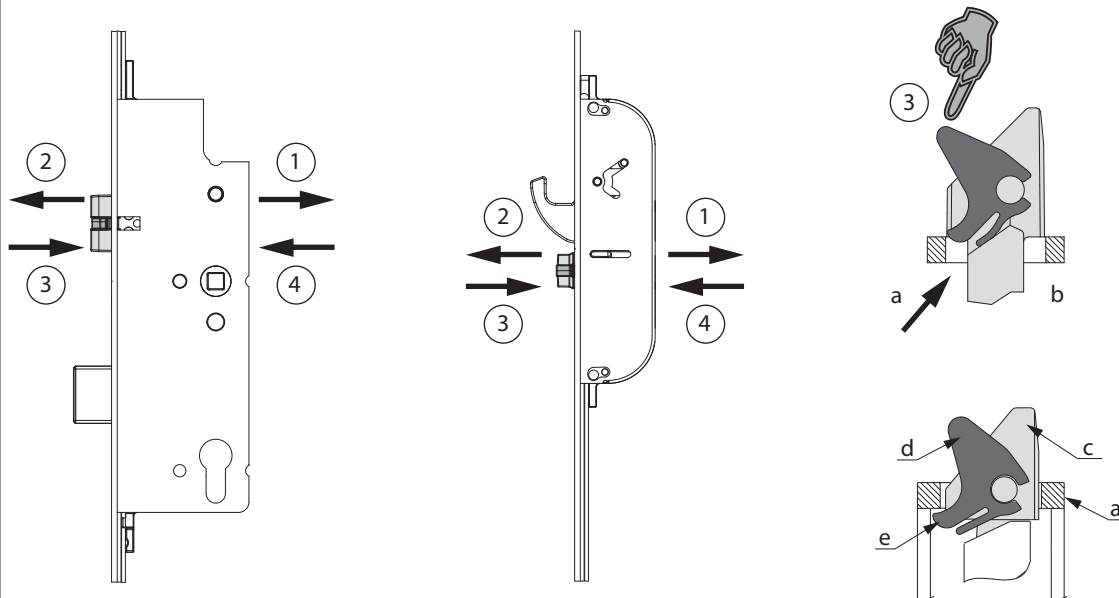

4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert


Operating instructions

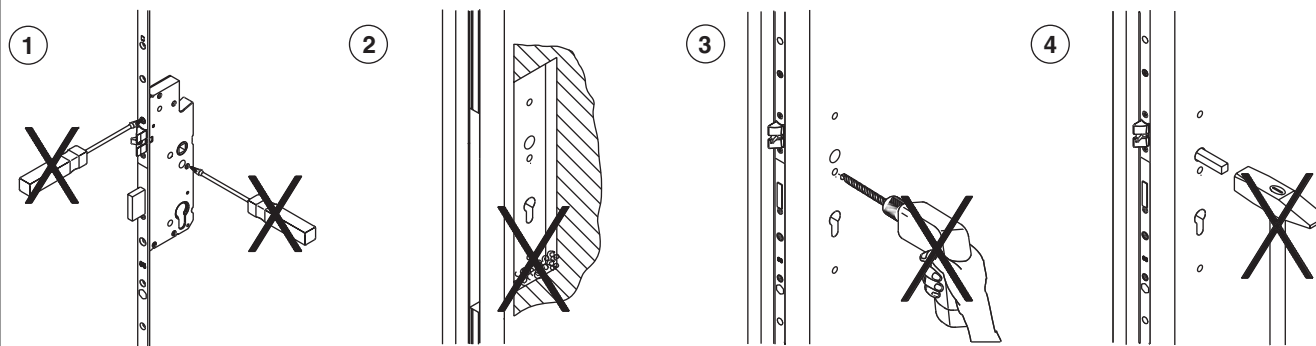


- 1) Never open the lock case!
- 2) Remove chips from milling pocket!
- 3) Carry out all drilling work before installing the lock!
- 4) Do not hammer lever handle spindle pin forcibly through spindle-receiver!




**231455 - Door lock Z-TF entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x16 fixed PT**

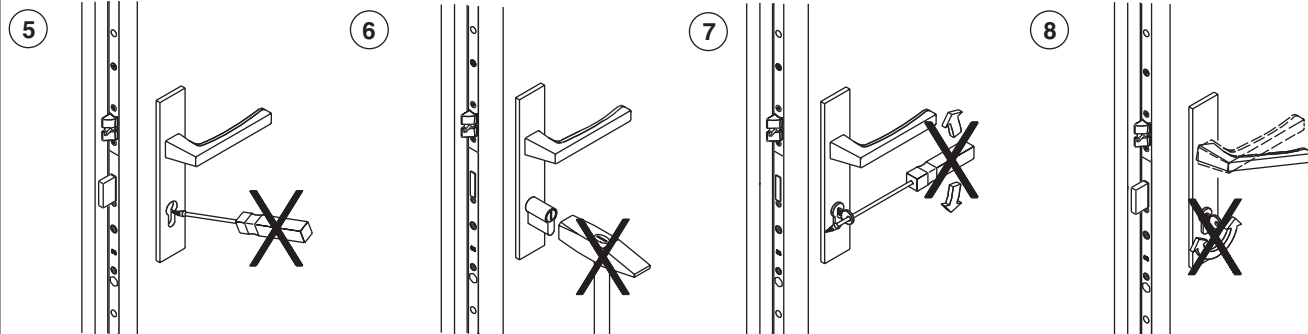

- 5) Do not use force when installing the cylinder!
6) Do not apply force through external leverage in order to turn the key!
7) Do not operate lever handle and key simultaneously!

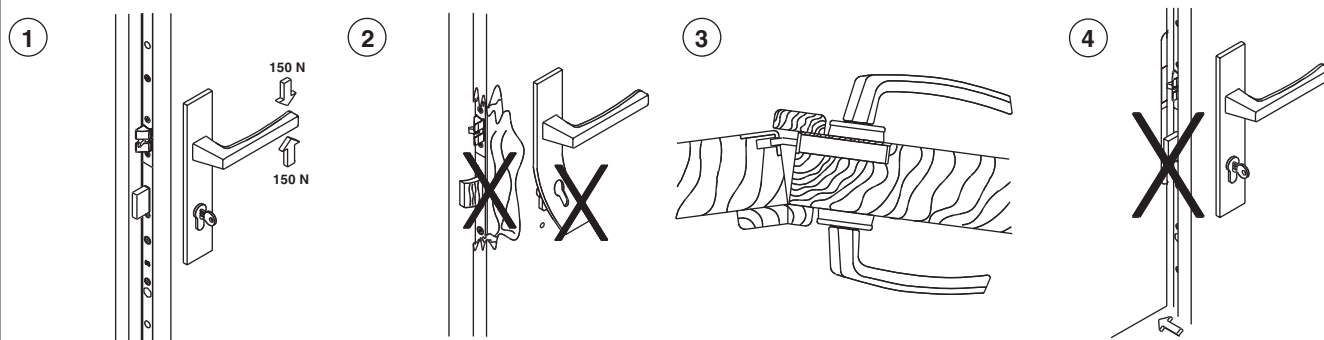



- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!
2) If traces of force are visible, the lock must be replaced.
3) On double doors, the active door must be opened before the passive door.
4) Ensure deadbolt is not protruding when door is open!

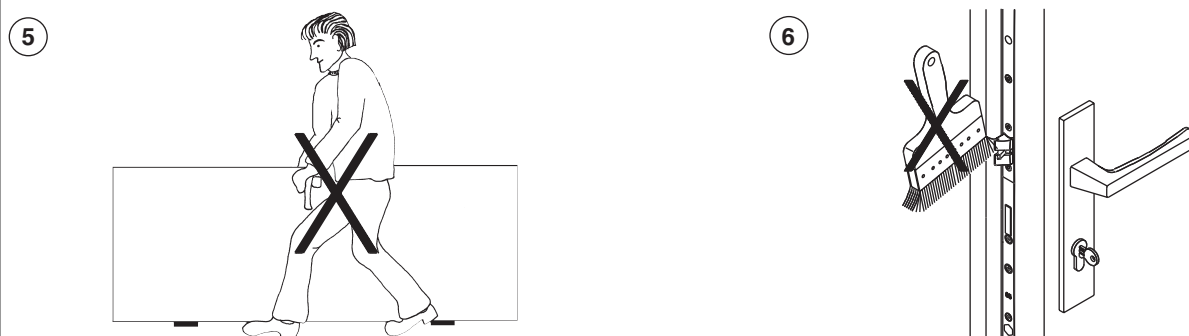

- 5) Do not carry door by lever handle!
6) Do not paint or varnish over the lock's deadbolt and latch!



**231455 - Door lock Z-TF entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x16 fixed PT**

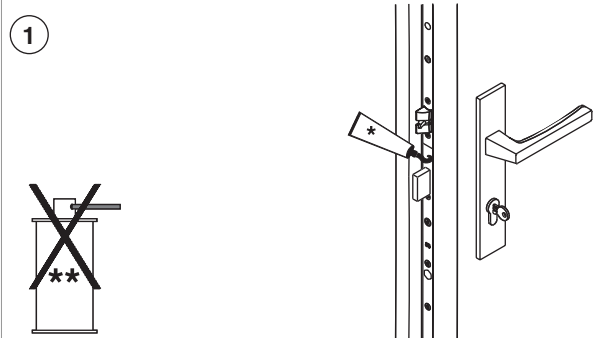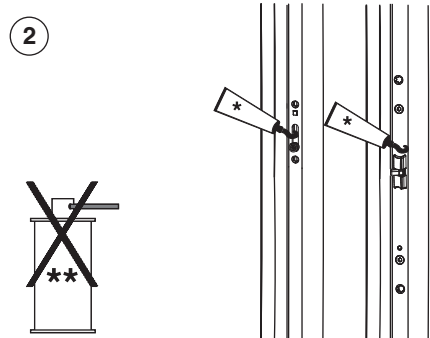1 	2 
1) The doorlock (lock casing) is supplied with a high performance lubricant and DOES NOT require any further lubrication. Latch and deadbolt must be lubricated once a year. 2) Multifunctional latches and i.S. locking cams as well as the connecting rod below must be lubricated once a year! * Grease ** Rust remover, silicone spray etc.	
	Lubrication is to be carried out generally only with lubrication grease or technical Vaseline! Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!



**231455 - Door lock Z-TF entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x16 fixed PT**

Use of transport protection devices

