


## 231572 - Door lock Z-TF entry92 BS45 PC 2 MF-HO K+980 HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT

### Technical drawing

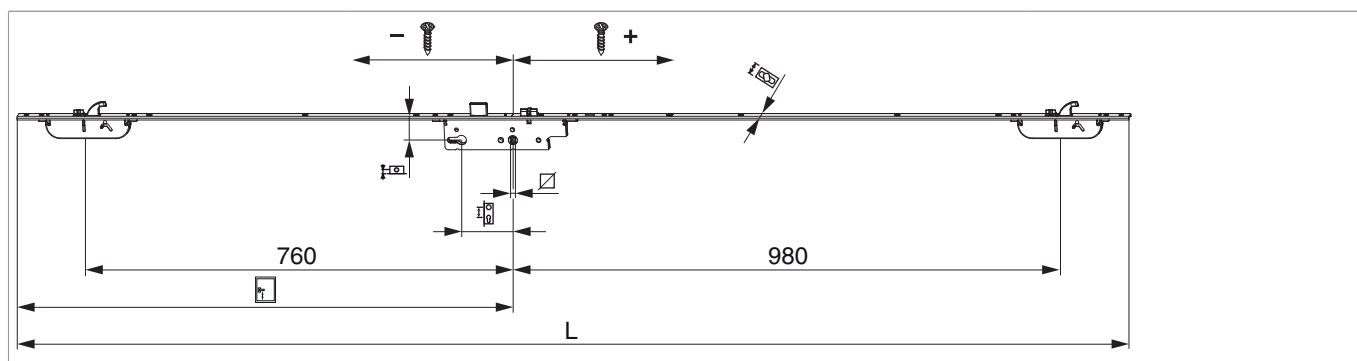

| fixed | silver | 92 | 45 | 8 | 885 | 2.200 - 2.400 | 24 | L | 1.990 | 5 | <b>Nº</b> |
|-------|--------|----|----|---|-----|---------------|----|---|-------|---|-----------|
|       |        |    |    |   |     |               |    |   |       |   | 231572    |

### Screw position table

| <b>Nº</b> |   |      |      |      |      |       |     |     |     |       |  |
|-----------|---|------|------|------|------|-------|-----|-----|-----|-------|--|
| 231572    | 9 | -870 | -650 | -371 | -172 | 176,5 | 409 | 689 | 870 | 1.090 |  |

### Product image





## Lock cases






## 231572 - Door lock Z-TF entry92 BS45 PC 2 MF-HO K+980 HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT

### Latch conversion


#### Cranked latch

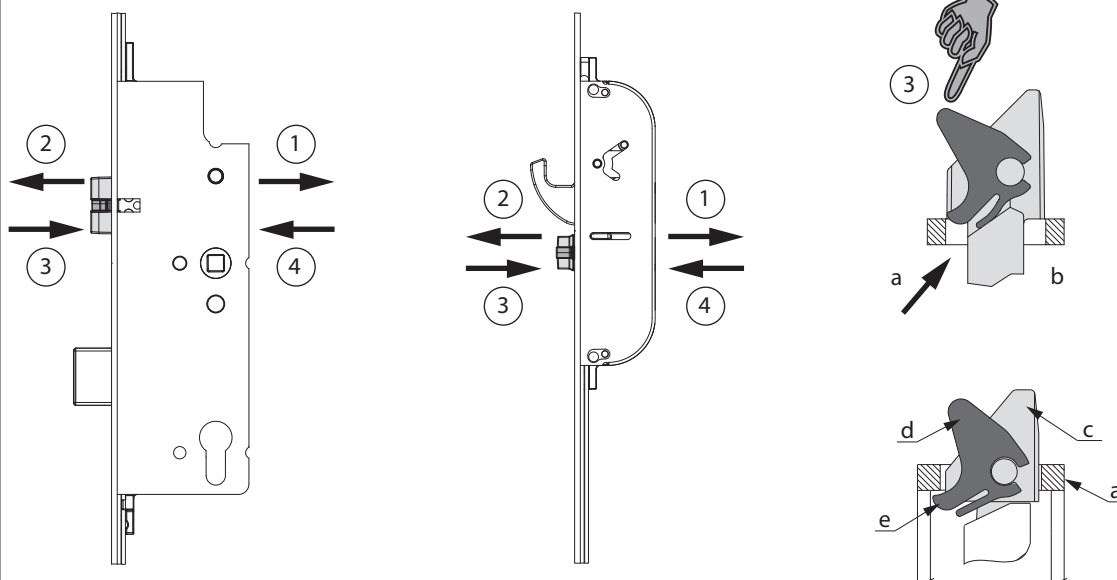

4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).  
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert


### Operating instructions

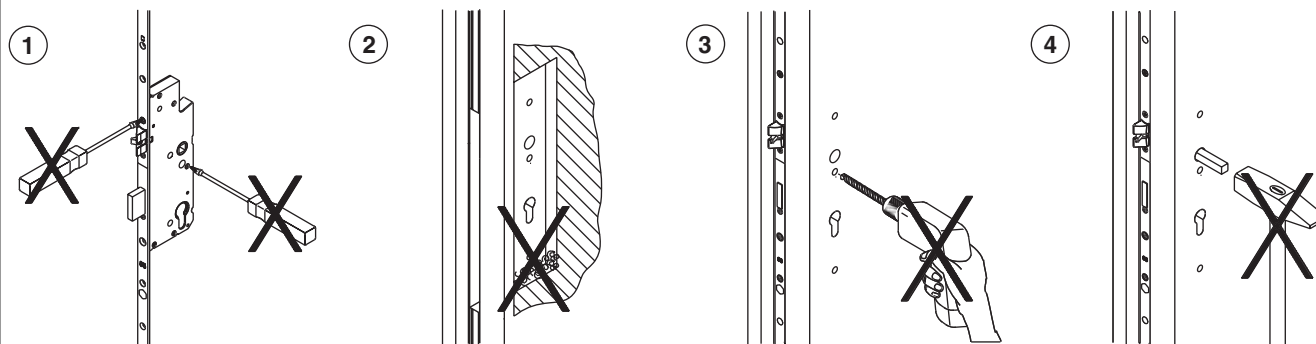


- 1) Never open the lock case!
- 2) Remove chips from milling pocket!
- 3) Carry out all drilling work before installing the lock!
- 4) Do not hammer lever handle spindle pin forcibly through spindle-receiver!




**231572 - Door lock Z-TF entry92 BS45 PC 2 MF-HO K+980  
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**

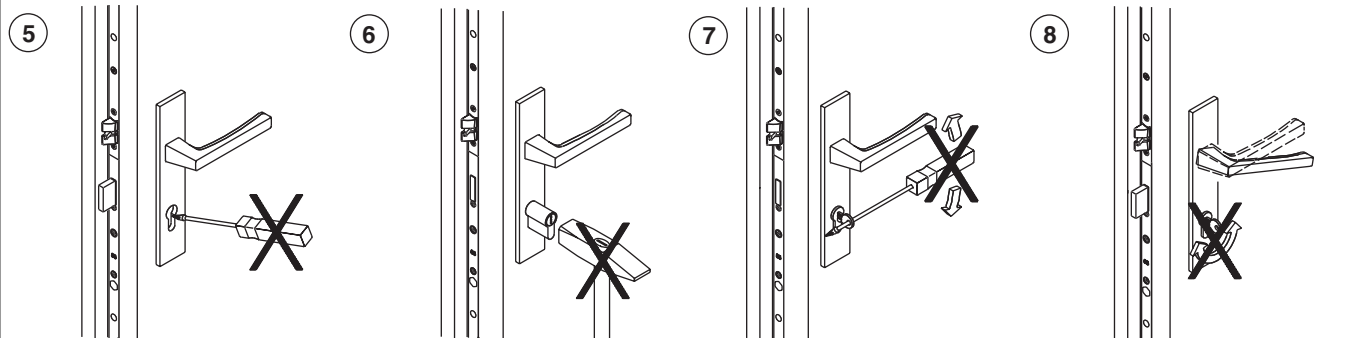

- 5) Do not use force when installing the cylinder!  
6) Do not apply force through external leverage in order to turn the key!  
7) Do not operate lever handle and key simultaneously!

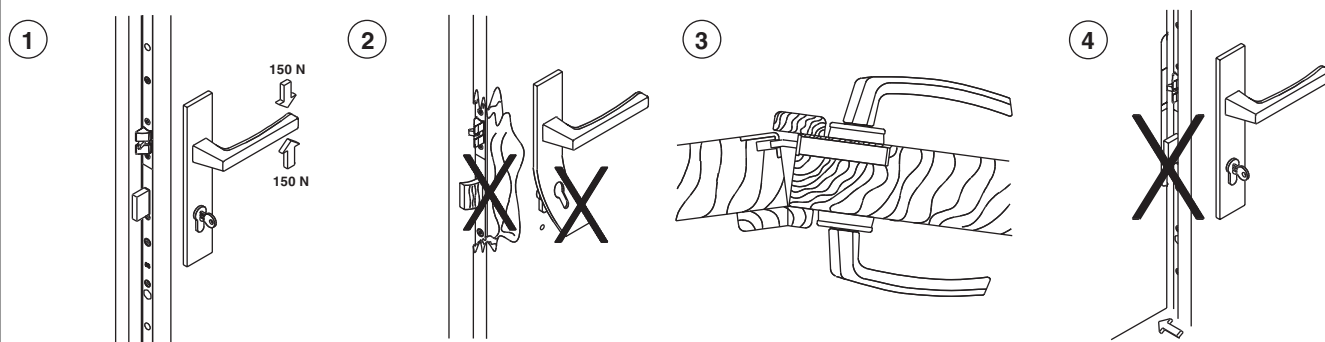



- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!  
2) If traces of force are visible, the lock must be replaced.  
3) On double doors, the active door must be opened before the passive door.  
4) Ensure deadbolt is not protruding when door is open!

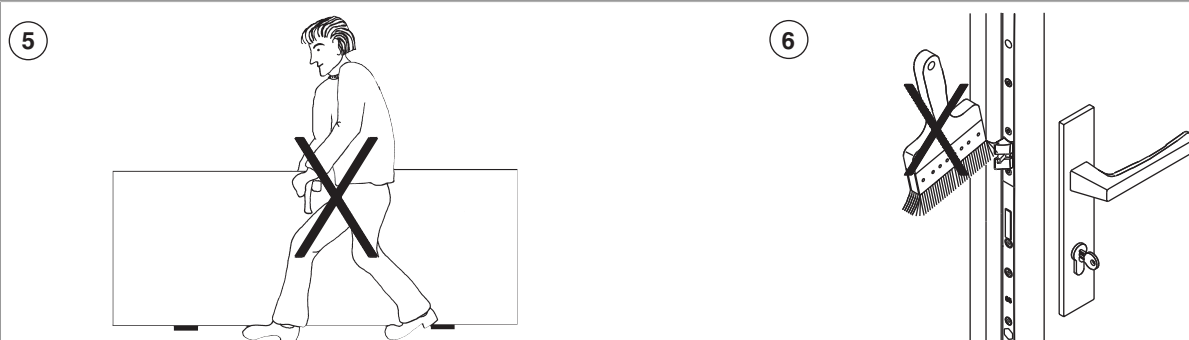

- 5) Do not carry door by lever handle!  
6) Do not paint or varnish over the lock's deadbolt and latch!



**231572 - Door lock Z-TF entry92 BS45 PC 2 MF-HO K+980  
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**
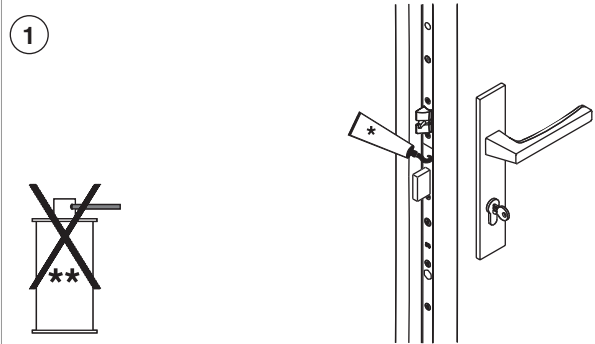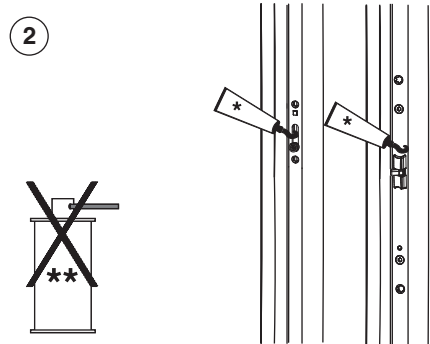
|                                                                                                                                                                                                                                                                                                                                                                             |                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>①</p>                                                                                                                                                                                                                                                                                   | <p>②</p>                                                                                            |
| <p>1) The doorlock (lock casing) is supplied with a high performance lubricant and DOES NOT require any further lubrication. Latch and deadbolt must be lubricated once a year.</p> <p>2) Multifunctional latches and i.S. locking cams as well as the connecting rod below must be lubricated once a year!</p> <p>* Grease</p> <p>** Rust remover, silicone spray etc.</p> |                                                                                                                                                                                       |
|                                                                                                                                                                                                                                                                                          | <p>Lubrication is to be carried out generally only with lubrication grease or technical Vaseline!<br/>Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!</p> |



**231572 - Door lock Z-TF entry92 BS45 PC 2 MF-HO K+980  
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**

**Use of transport protection devices**

