




245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH 1.050 silver square spindle =8 F-2.200x20 modular PT-M

Technical drawing

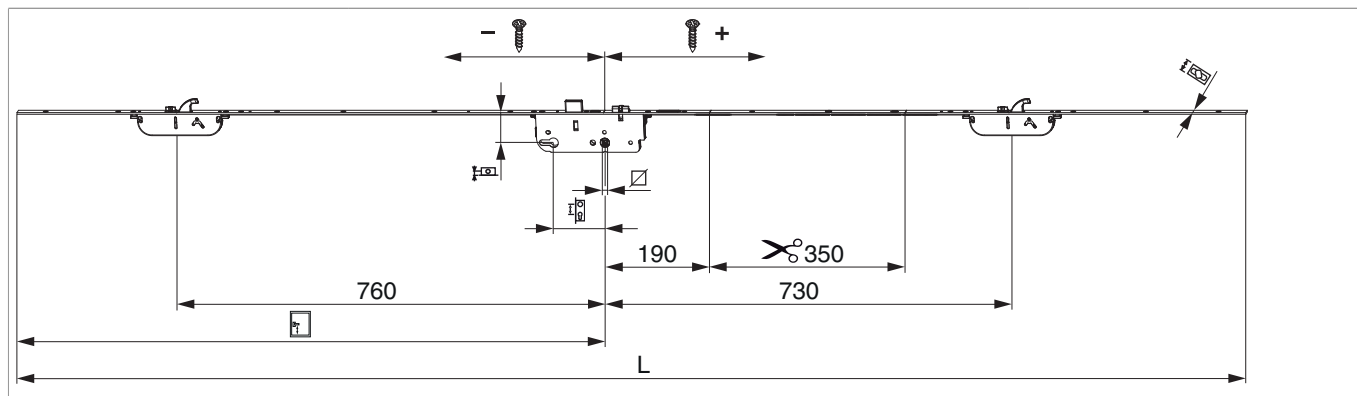

								L		Nº
modular	silver	92	55	8	1.050	2.000 - 2.200	20	2.200	5	245014

Screw position table

Nº															
245014	13	-1.000	-870	-650	-585,6	-466,9	-304	-168	143,5	265	620	840	970	1.100	

Product image






**245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH
1.050 silver square spindle =8 F-2.200x20 modular PT-M**

Routing

Lock cases

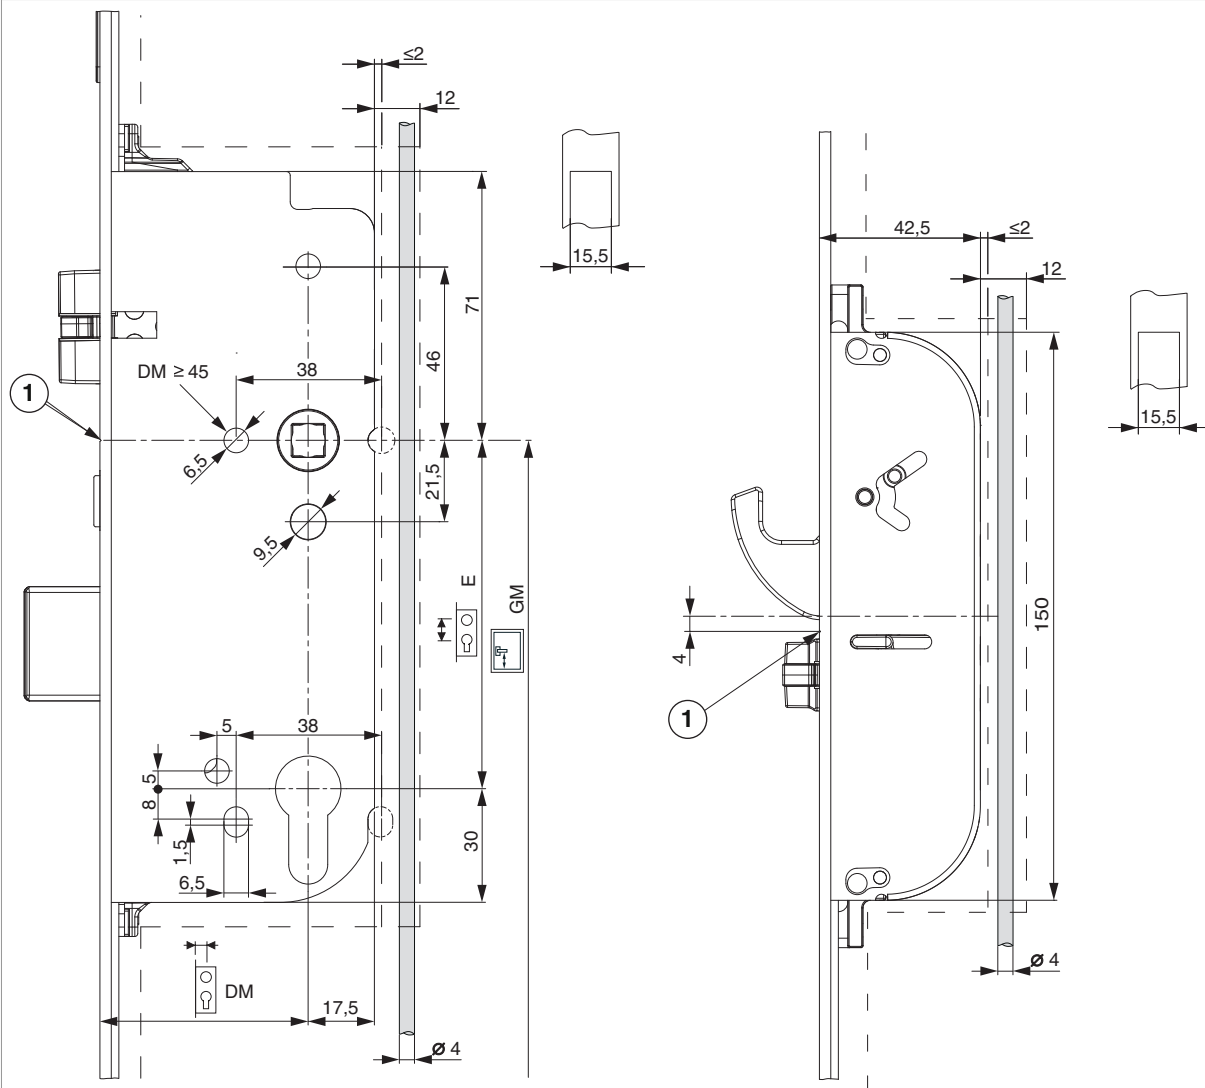




1) faceplate notch



245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH 1.050 silver square spindle =8 F-2.200x20 modular PT-M

Latch conversion

Cranked latch

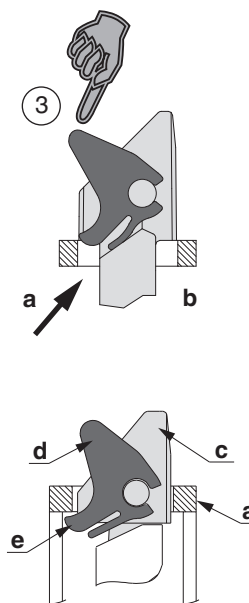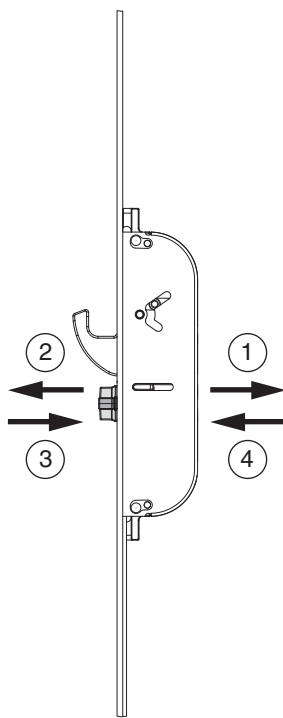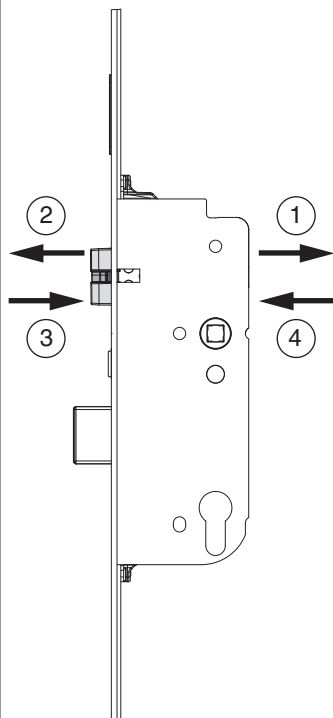


4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert




**245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH
1.050 silver square spindle =8 F-2.200x20 modular PT-M**

mounting instructions

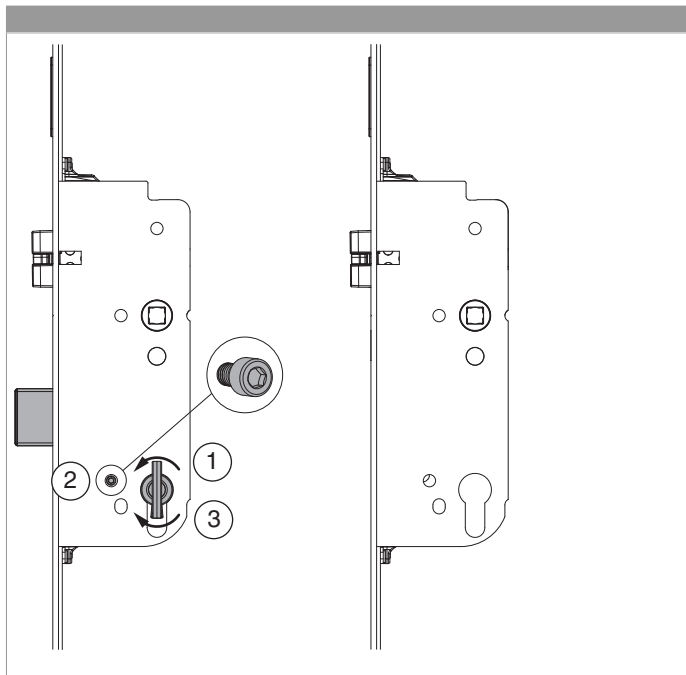




245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH
1.050 silver square spindle =8 F-2.200x20 modular PT-M

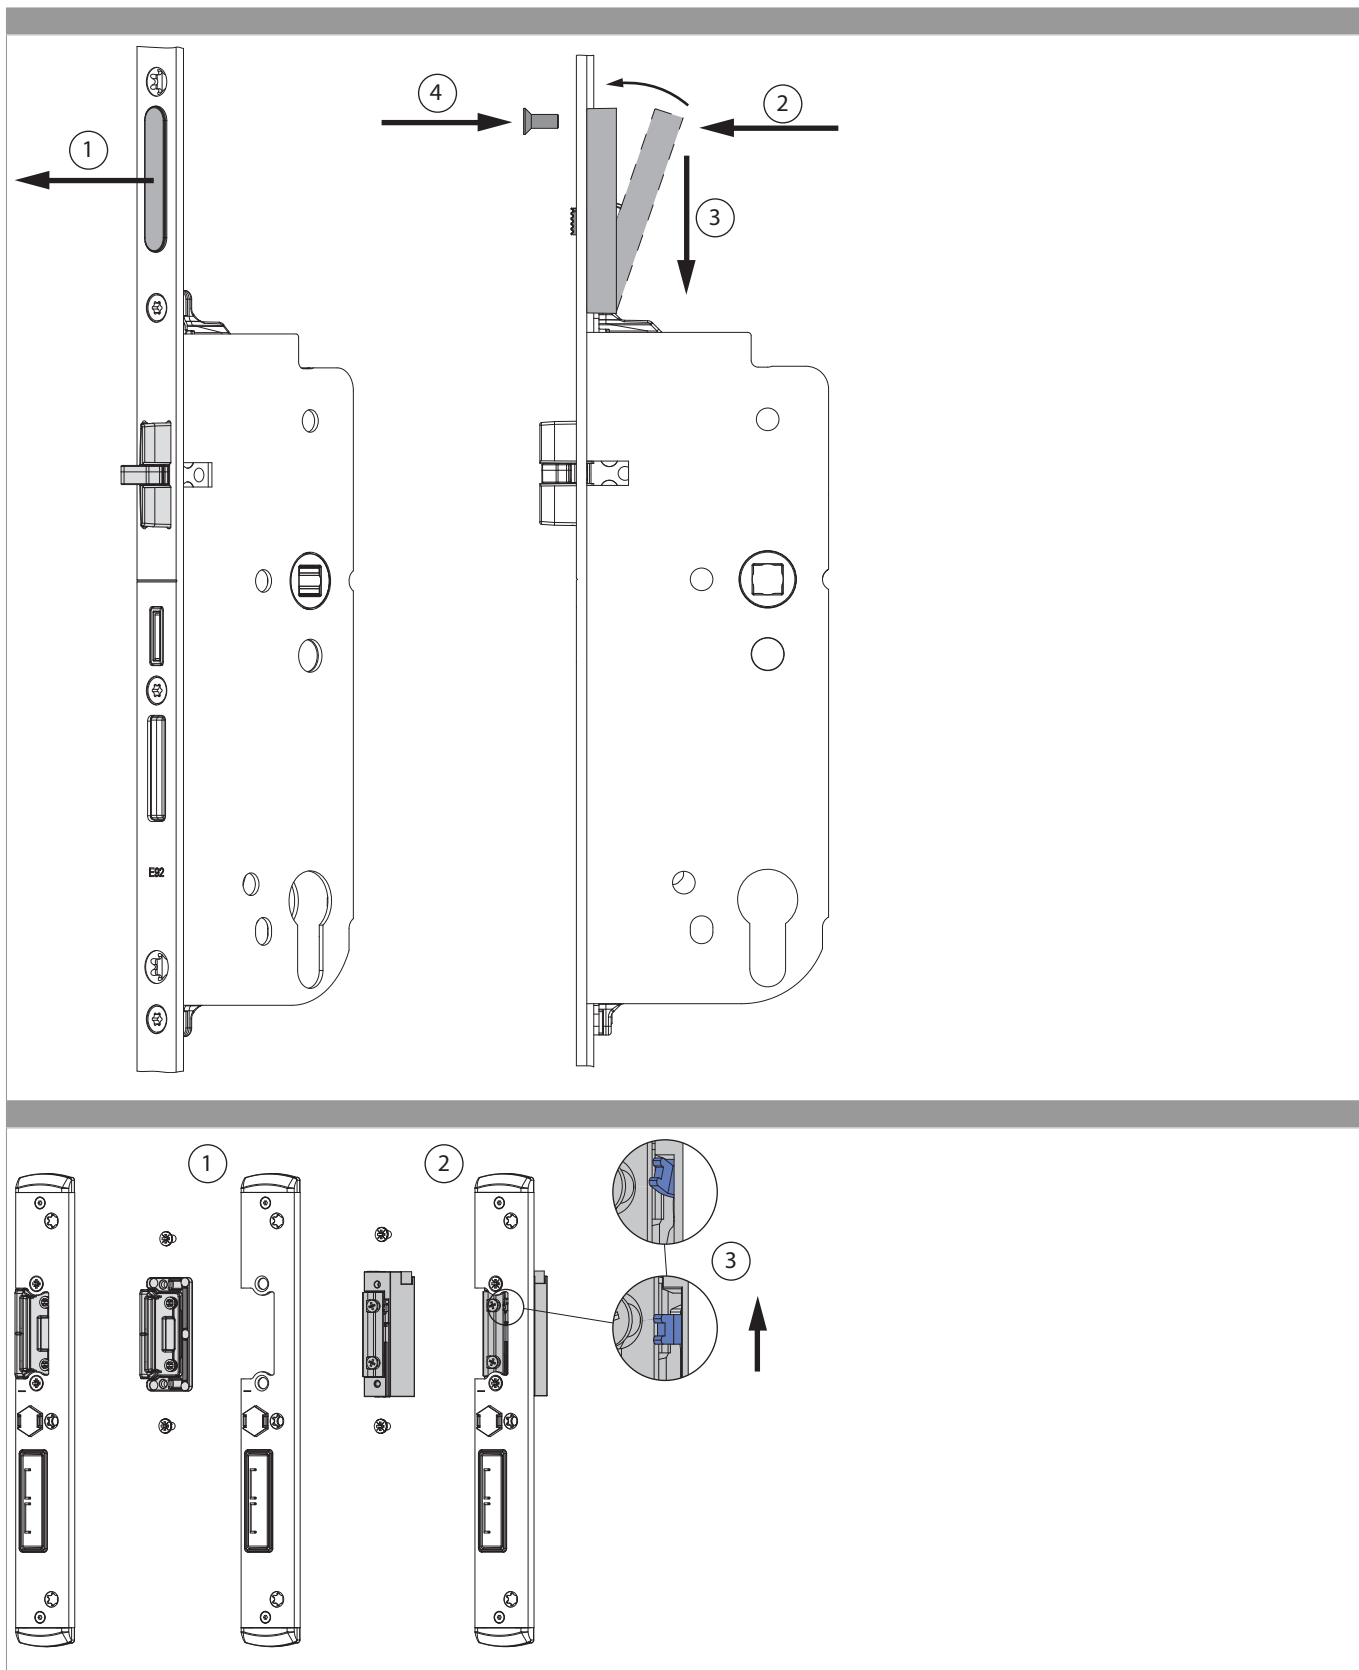





245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH 1.050 silver square spindle =8 F-2.200x20 modular PT-M

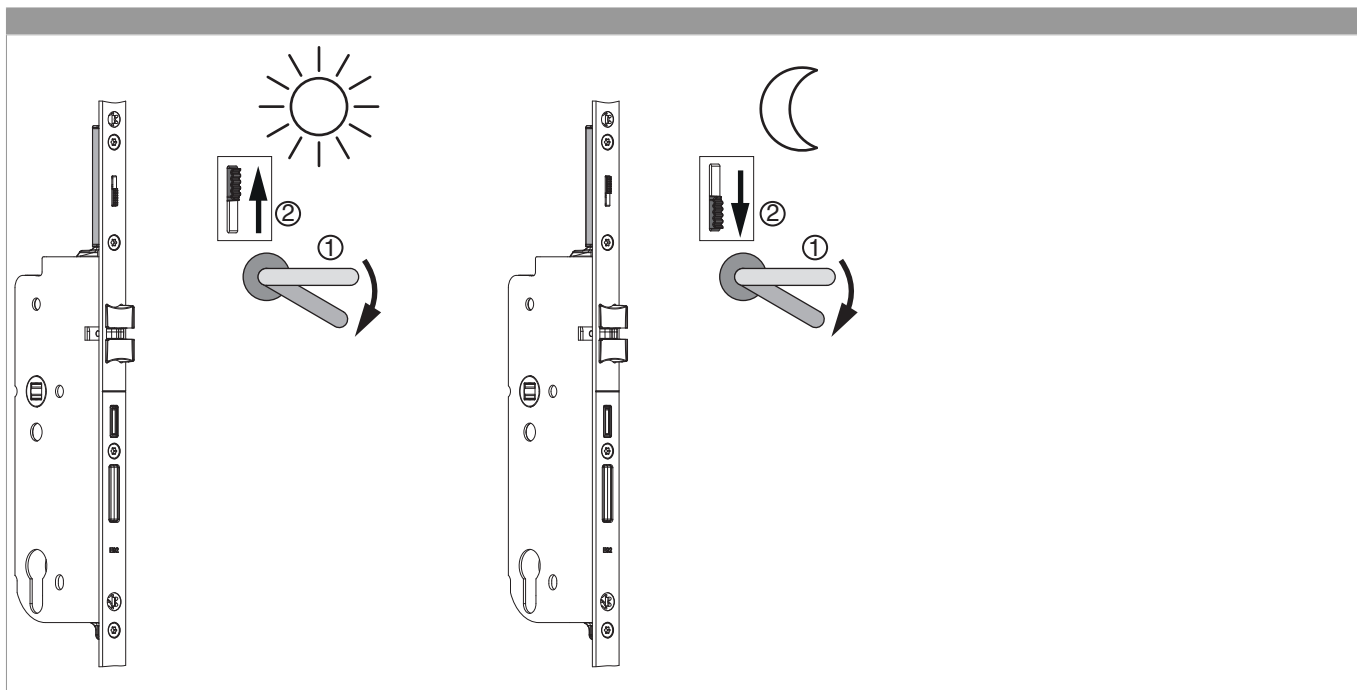


Operating instructions

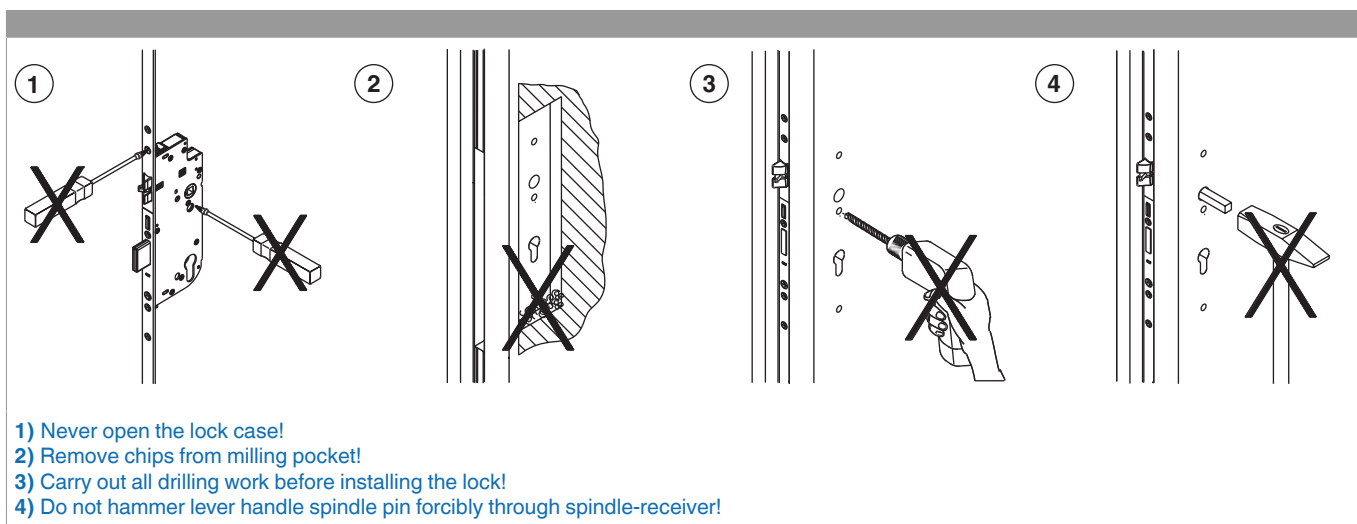


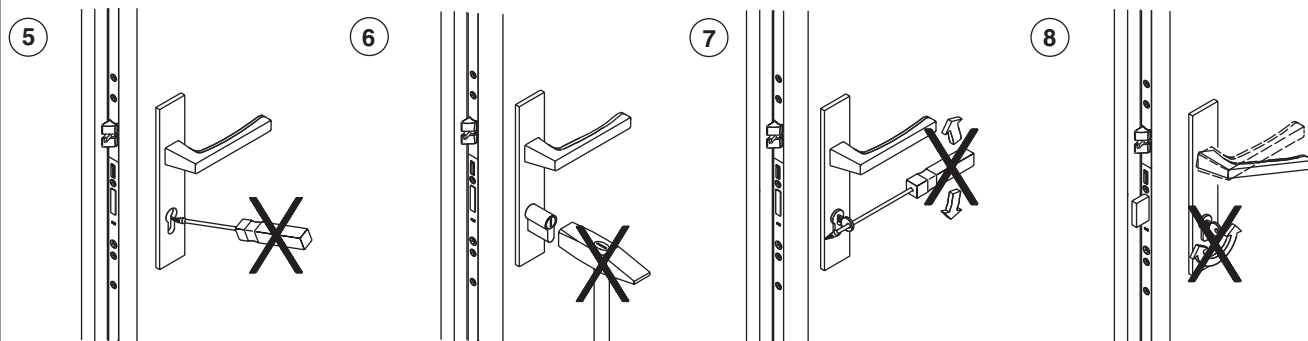

- 5) Only lock doorlock with appropriate universal access key!
- 6) Do not use force when installing the cylinder!
- 7) Do not apply force through external leverage in order to turn the key!
- 8) Do not operate lever handle and key simultaneously!

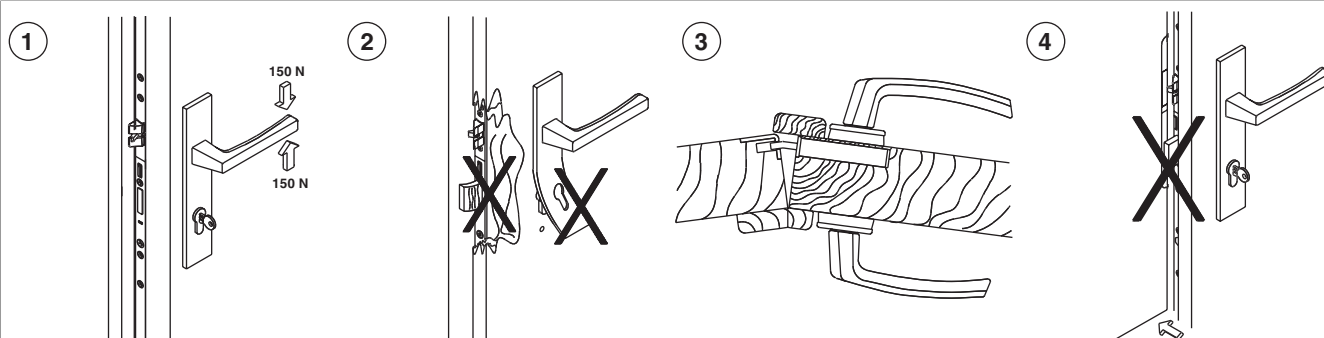



- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!
- 2) If traces of force are visible, the lock must be replaced.
- 3) On double doors, the active door must be opened before the passive door.
- 4) Ensure deadbolt is not protruding when door is open!

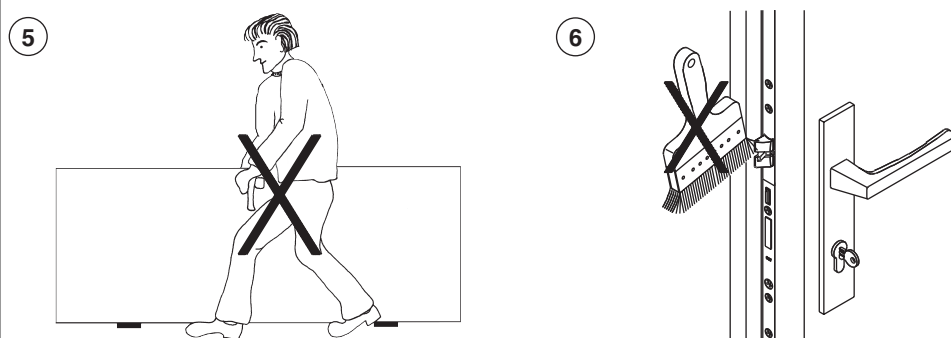

- 5) Do not carry door by lever handle!
- 6) Do not paint or varnish over the lock's deadbolt and latch!



**245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH
1.050 silver square spindle =8 F-2.200x20 modular PT-M**

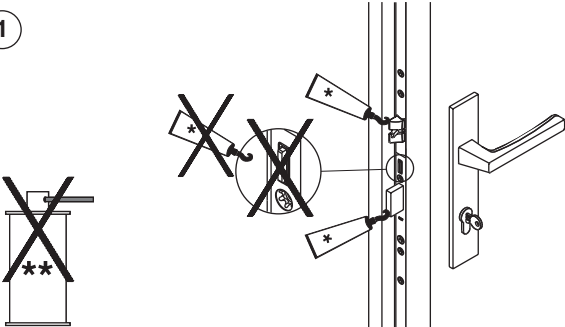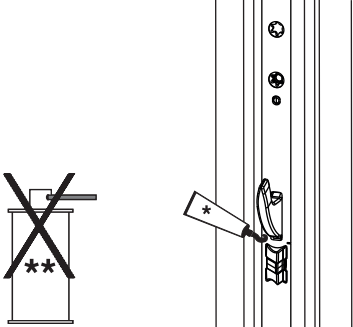① 	② 
1) Latch and deadbolt must be lubricated once a year. The doorlock (lock case) is supplied with a high performance lubricant and DOES NOT require any further lubrication. 2) Multifunctional latches and hooks must be lubricated once a year. * Grease ** Rust remover, silicone spray etc.	
	Lubrication is to be carried out generally only with lubrication grease or technical Vaseline! Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!



**245014 - Door lock A-TS entry92 BS55 PC 2 MF-HO HH
1.050 silver square spindle =8 F-2.200x20 modular PT-M**

Use of transport protection devices

