




## 245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH 1.050 silver square spindle =8 F-2.200x24/16 modular PT-M

### Technical drawing

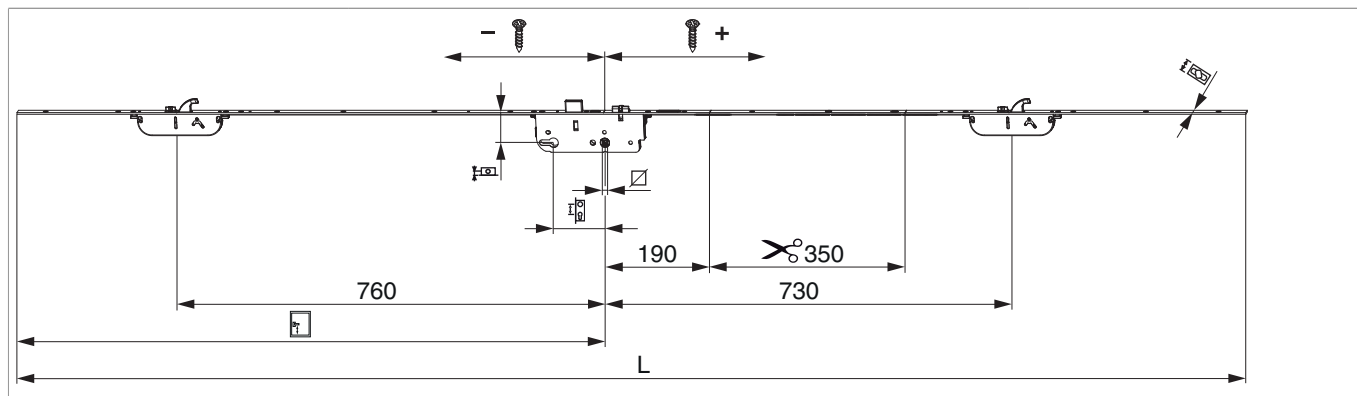

|         |        |    |    |   |       |               |       | <b>L</b> |   | <b>Nº</b>              |
|---------|--------|----|----|---|-------|---------------|-------|----------|---|------------------------|
| modular | silver | 92 | 45 | 8 | 1.050 | 2.000 - 2.200 | 24/16 | 2.200    | 5 | <a href="#">245032</a> |

### Screw position table

| <b>Nº</b>              |    |        |      |      |        |        |      |      |       |     |     |     |     |       |  |
|------------------------|----|--------|------|------|--------|--------|------|------|-------|-----|-----|-----|-----|-------|--|
| <a href="#">245032</a> | 13 | -1.000 | -870 | -650 | -585,6 | -466,9 | -304 | -168 | 143,5 | 265 | 620 | 840 | 970 | 1.100 |  |

### Product image






245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH  
1.050 silver square spindle =8 F-2.200x24/16 modular PT-M

## Routing

### Lock cases

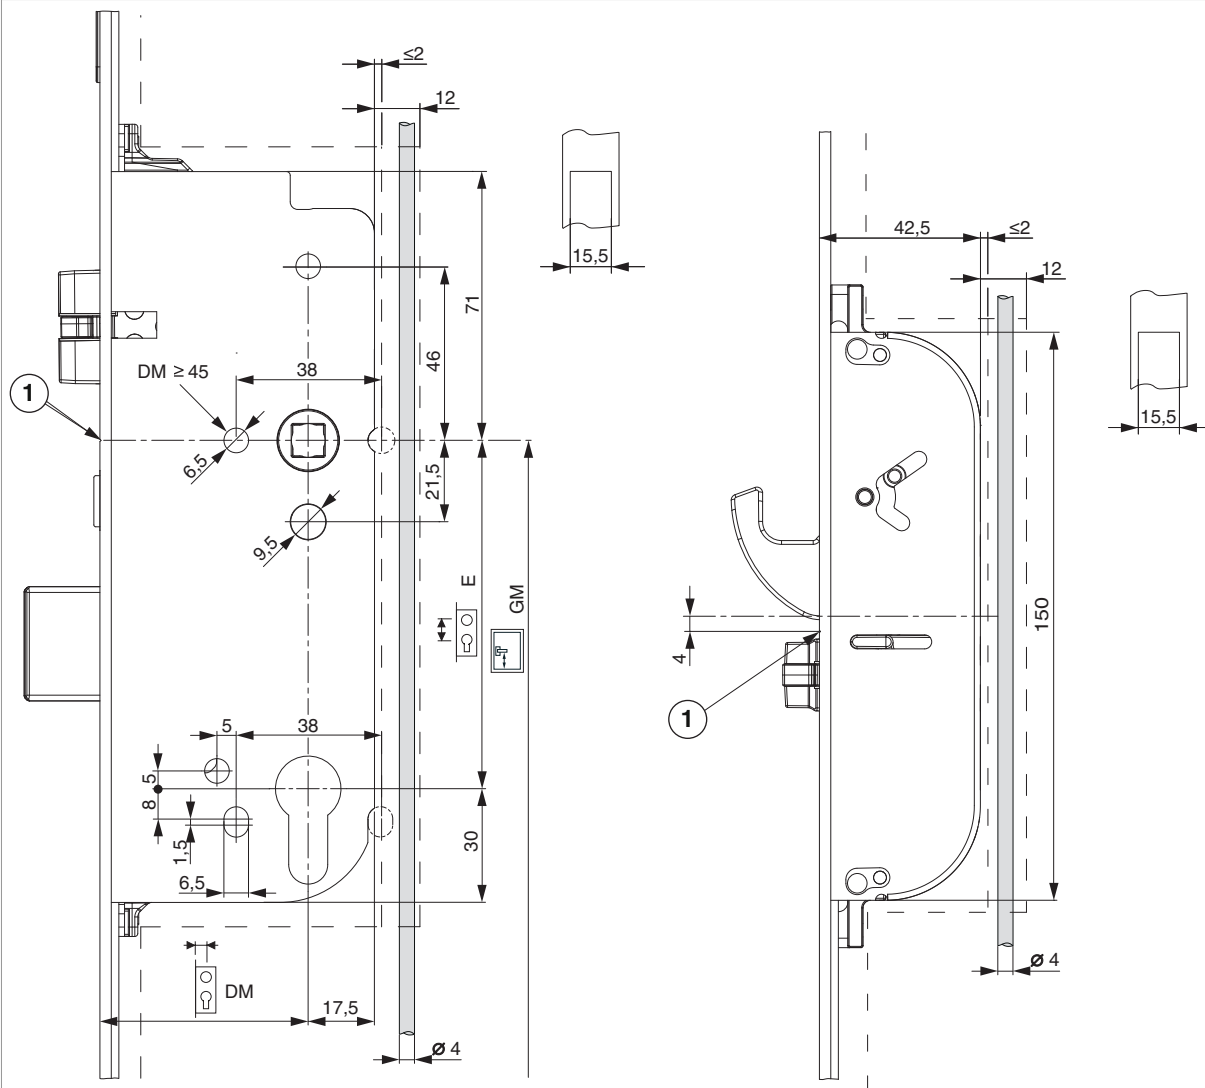


1) faceplate notch



# 245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH 1.050 silver square spindle =8 F-2.200x24/16 modular PT-M

## Latch conversion

### Cranked latch

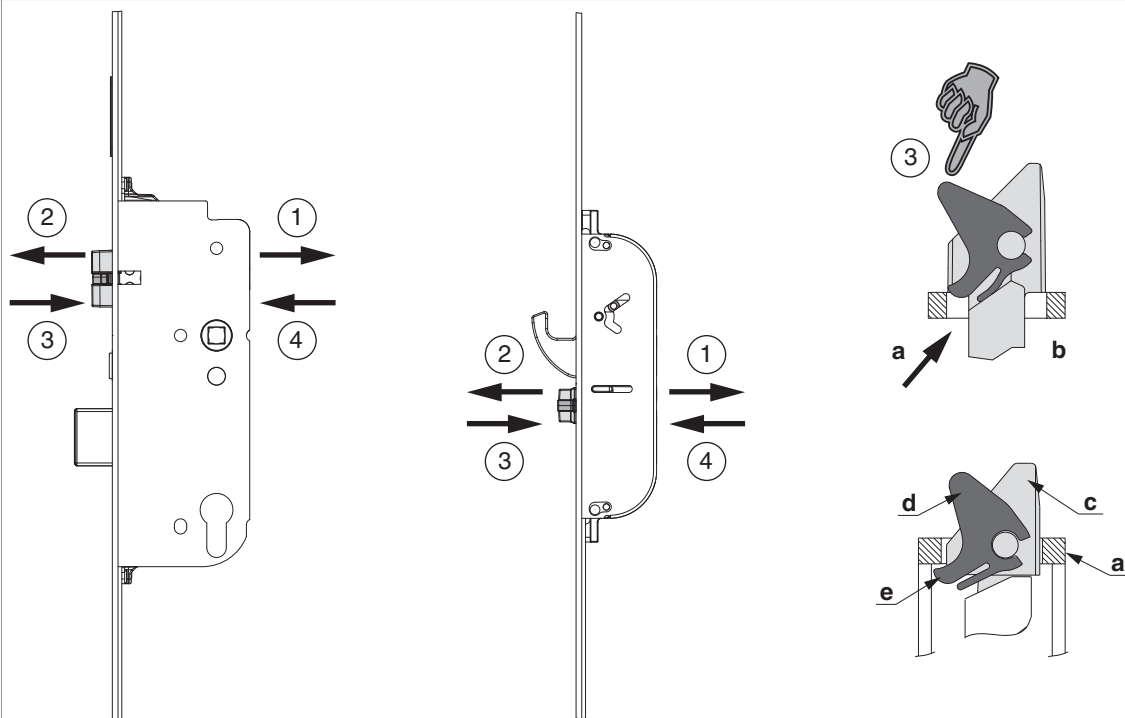


4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).  
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert




**245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH  
1.050 silver square spindle =8 F-2.200x24/16 modular PT-  
M**

**mounting instructions**

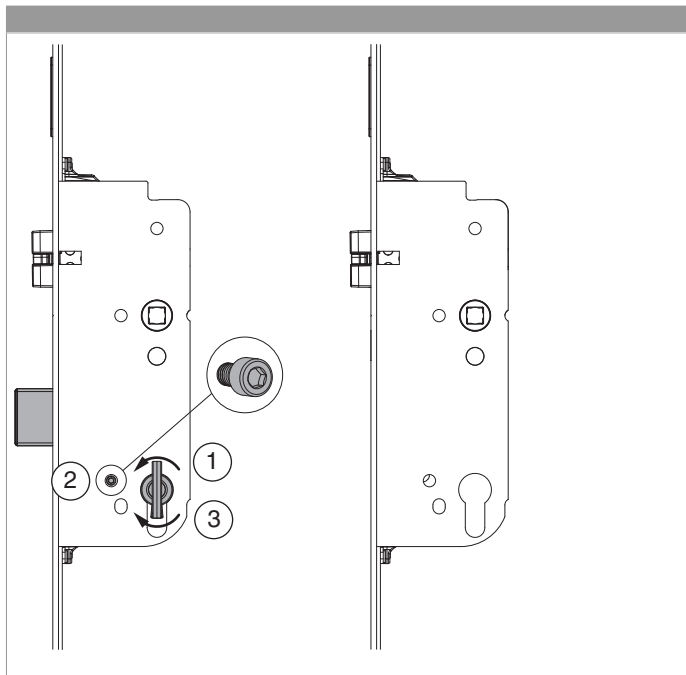




**245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH**  
**1.050 silver square spindle =8 F-2.200x24/16 modular PT-**  
**M**

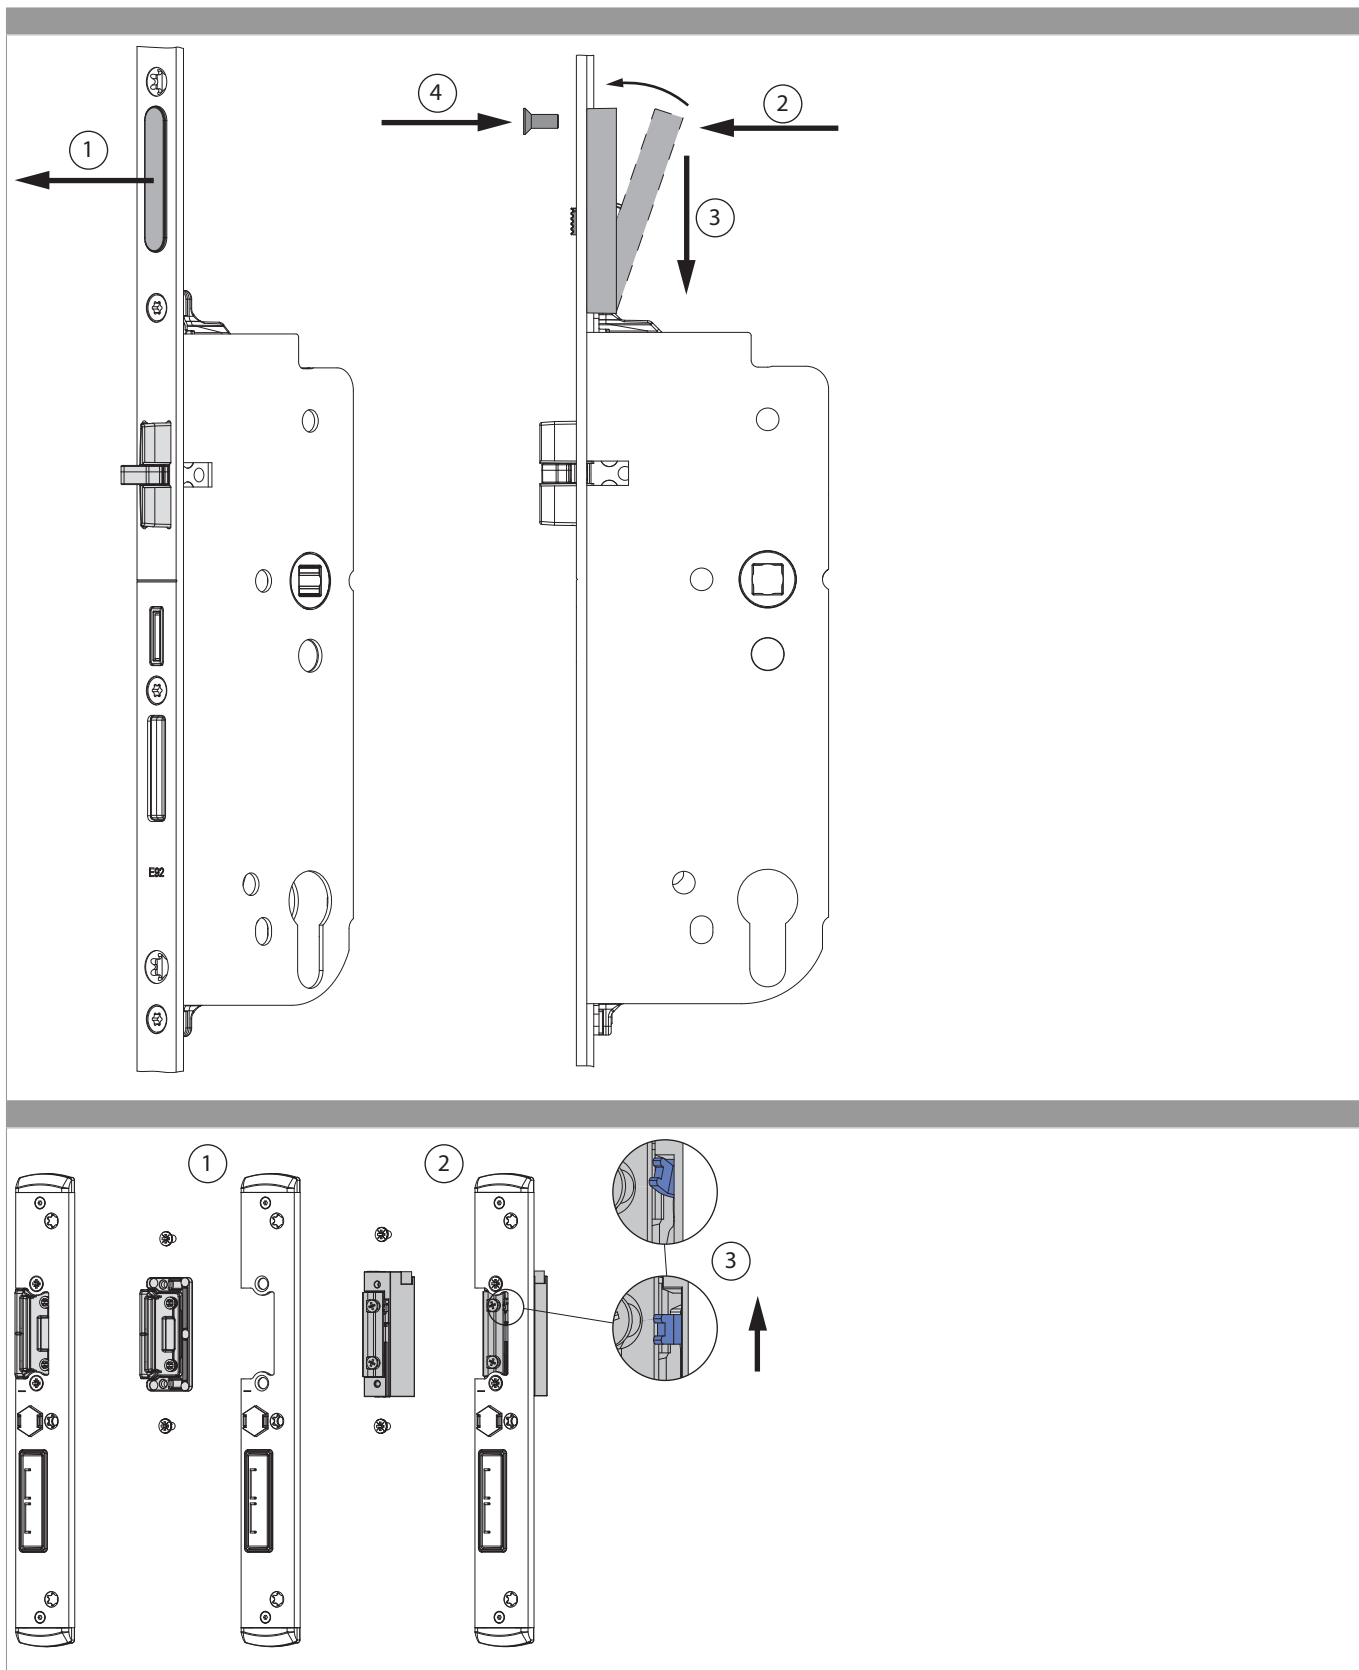





**245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH  
1.050 silver square spindle =8 F-2.200x24/16 modular PT-  
M**

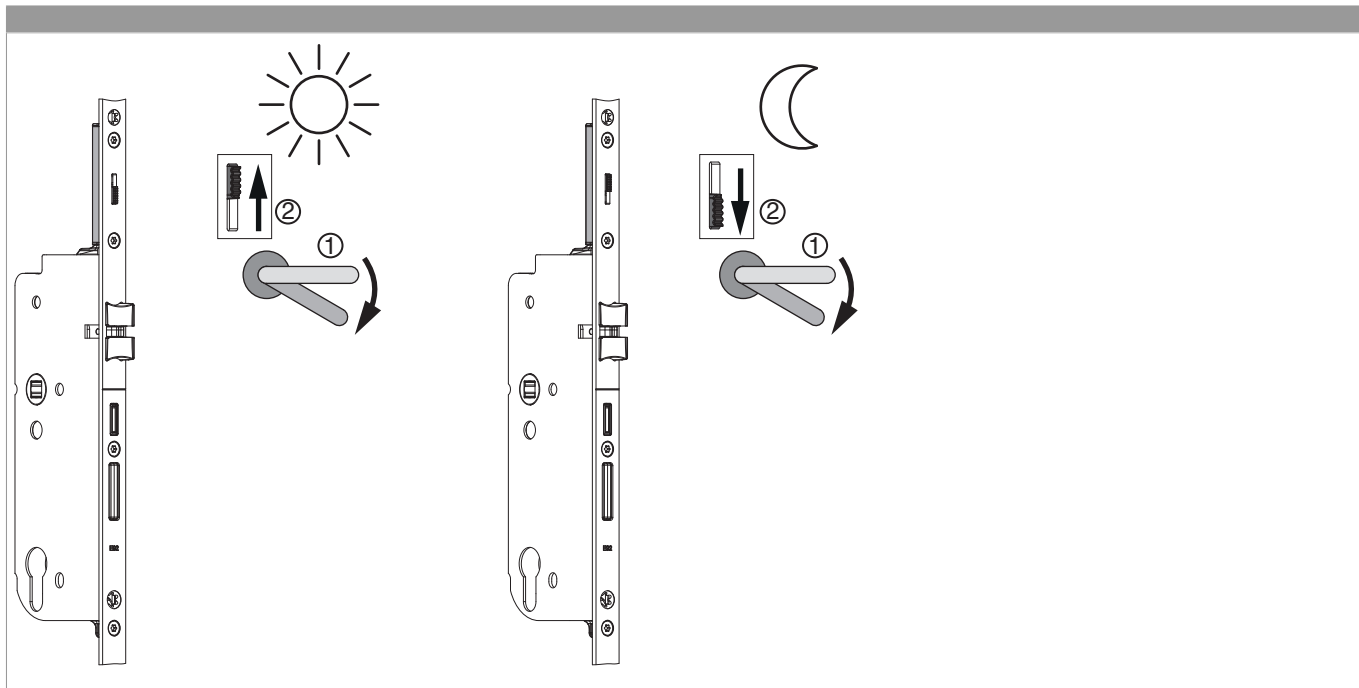


## Operating instructions

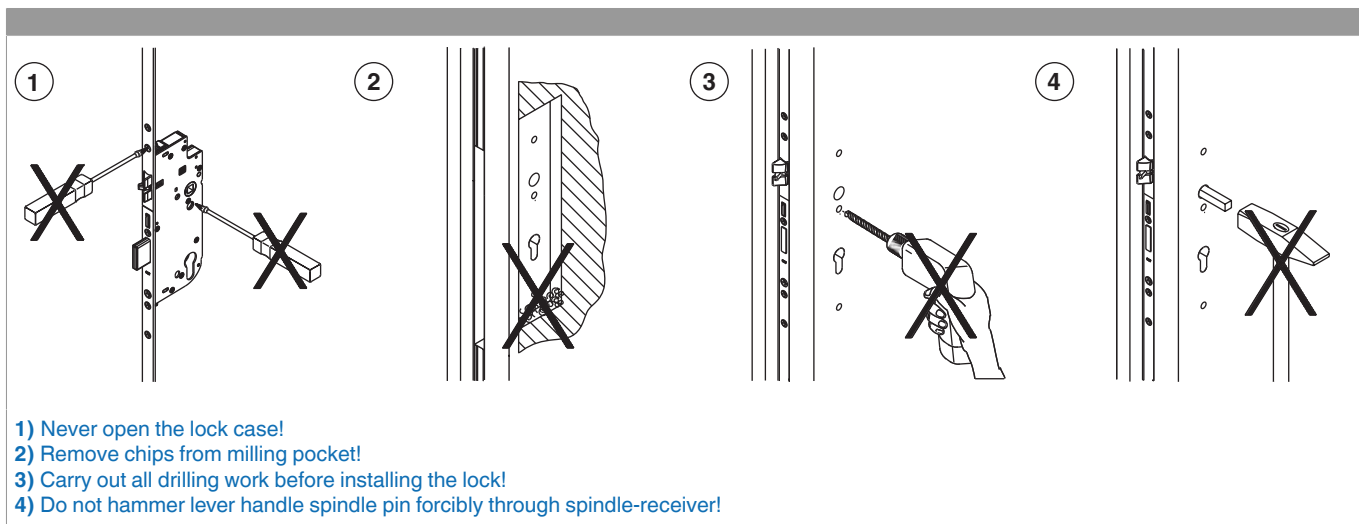


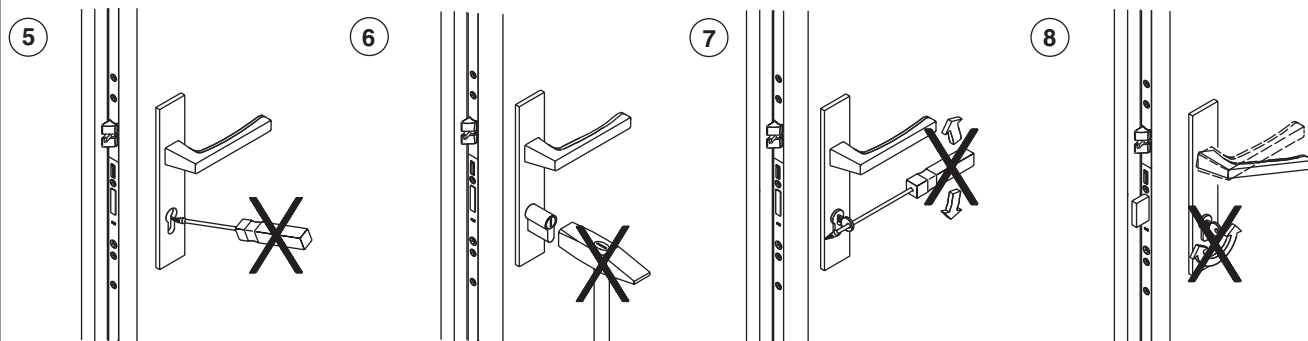

- 5) Only lock doorlock with appropriate universal access key!
- 6) Do not use force when installing the cylinder!
- 7) Do not apply force through external leverage in order to turn the key!
- 8) Do not operate lever handle and key simultaneously!

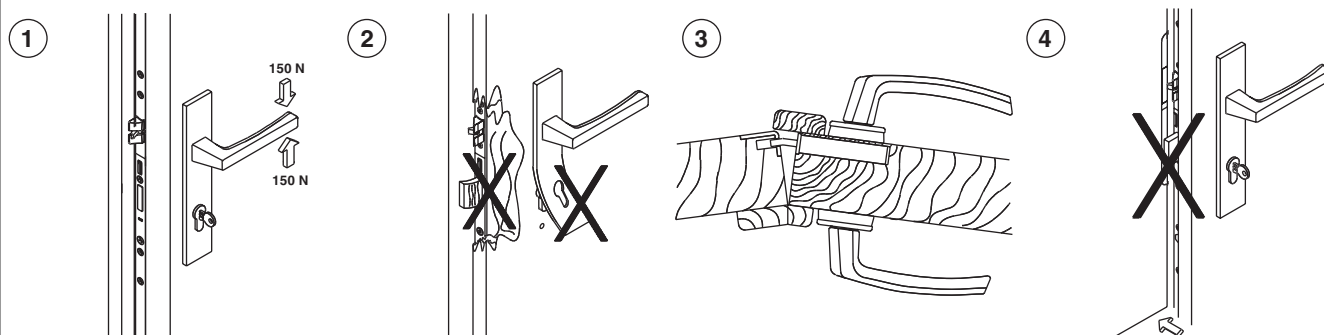



- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!
- 2) If traces of force are visible, the lock must be replaced.
- 3) On double doors, the active door must be opened before the passive door.
- 4) Ensure deadbolt is not protruding when door is open!

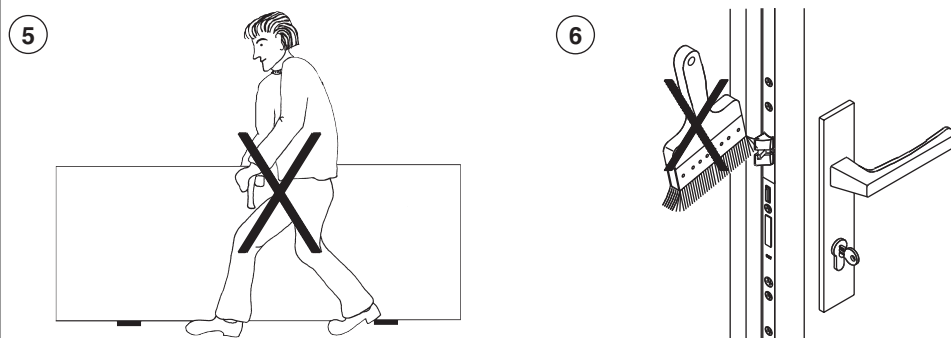

- 5) Do not carry door by lever handle!
- 6) Do not paint or varnish over the lock's deadbolt and latch!



245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH  
1.050 silver square spindle =8 F-2.200x24/16 modular PT-  
M
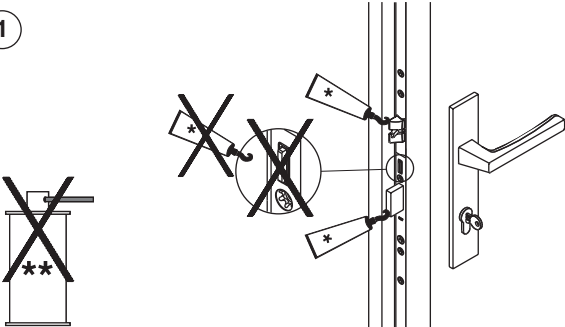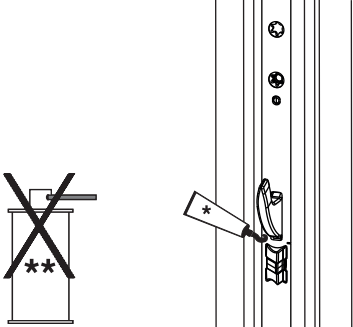
|                                                                                                                                                                                                                                                                                                                         |                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>①</p>                                                                                                                                                                                                                               | <p>②</p>                                                                                            |
| <p>1) Latch and deadbolt must be lubricated once a year.<br/>The doorlock (lock case) is supplied with a high performance lubricant and DOES NOT require any further lubrication.<br/>2) Multifunctional latches and hooks must be lubricated once a year.</p> <p>* Grease<br/>** Rust remover, silicone spray etc.</p> |                                                                                                                                                                                       |
|                                                                                                                                                                                                                                      | <p>Lubrication is to be carried out generally only with lubrication grease or technical Vaseline!<br/>Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!</p> |



245032 - Door lock A-TS entry92 BS45 PC 2 MF-HO HH  
1.050 silver square spindle =8 F-2.200x24/16 modular PT-  
M

## Use of transport protection devices

