




Technical drawing

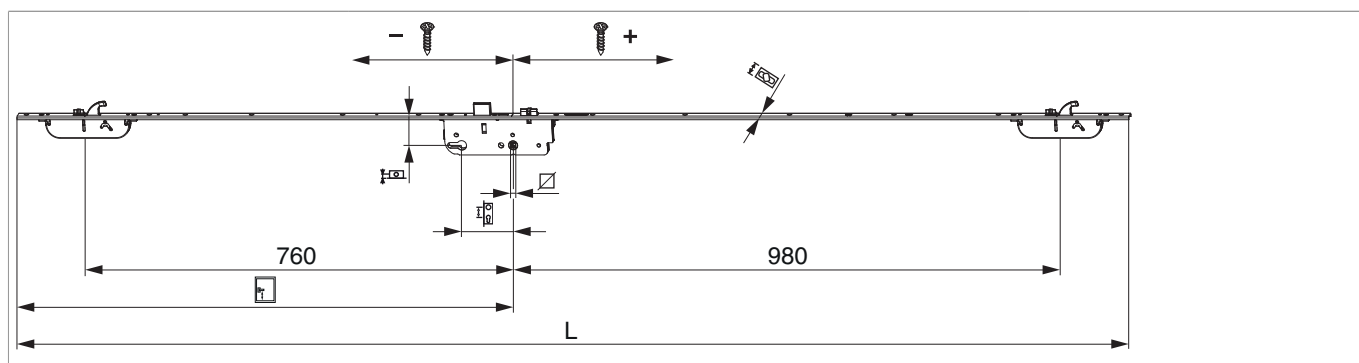

										
fixed	silver	92	40	8	885	2.200 - 2.400	24	1.990	5	245321

No															
245321	13	-1.000	-870	-650	-585,6	-466,9	-304	-168	143,5	309	496	683	870	1.090	


[illegible]



245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT

Routing

Lock cases

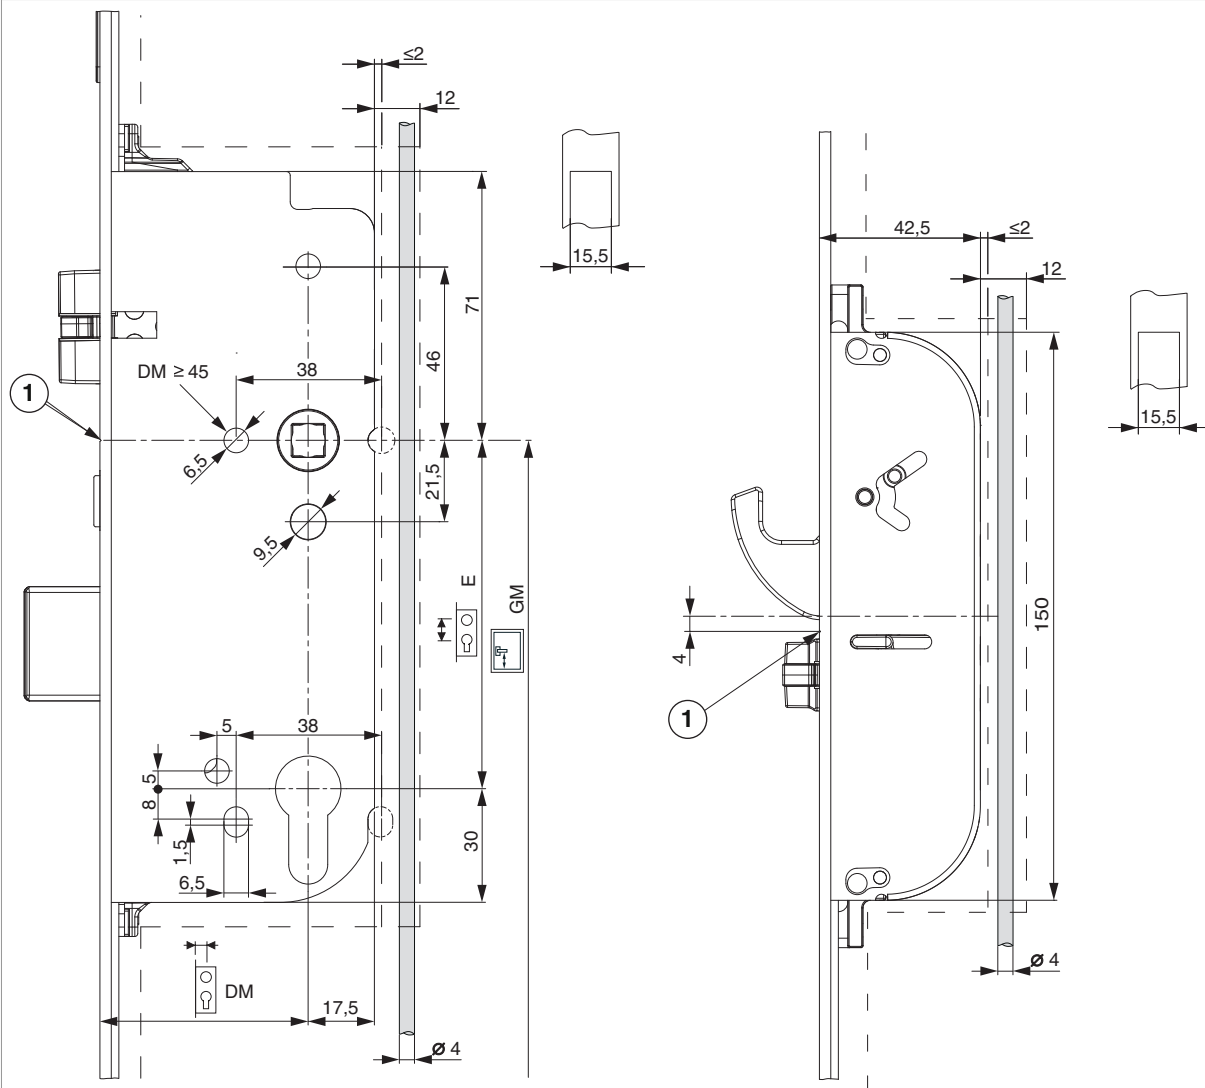

1) faceplate notch



245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980 HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT

Latch conversion

Cranked latch




4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert




**245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**

mounting instructions

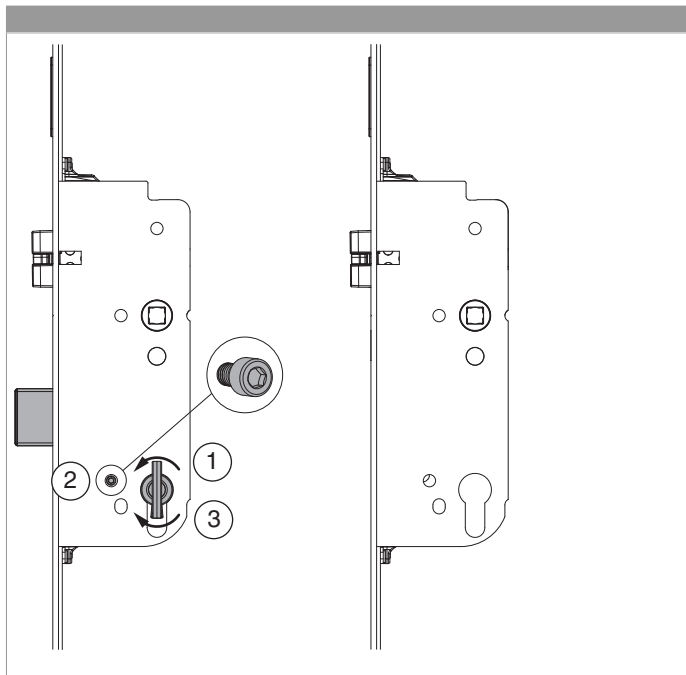




**245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**

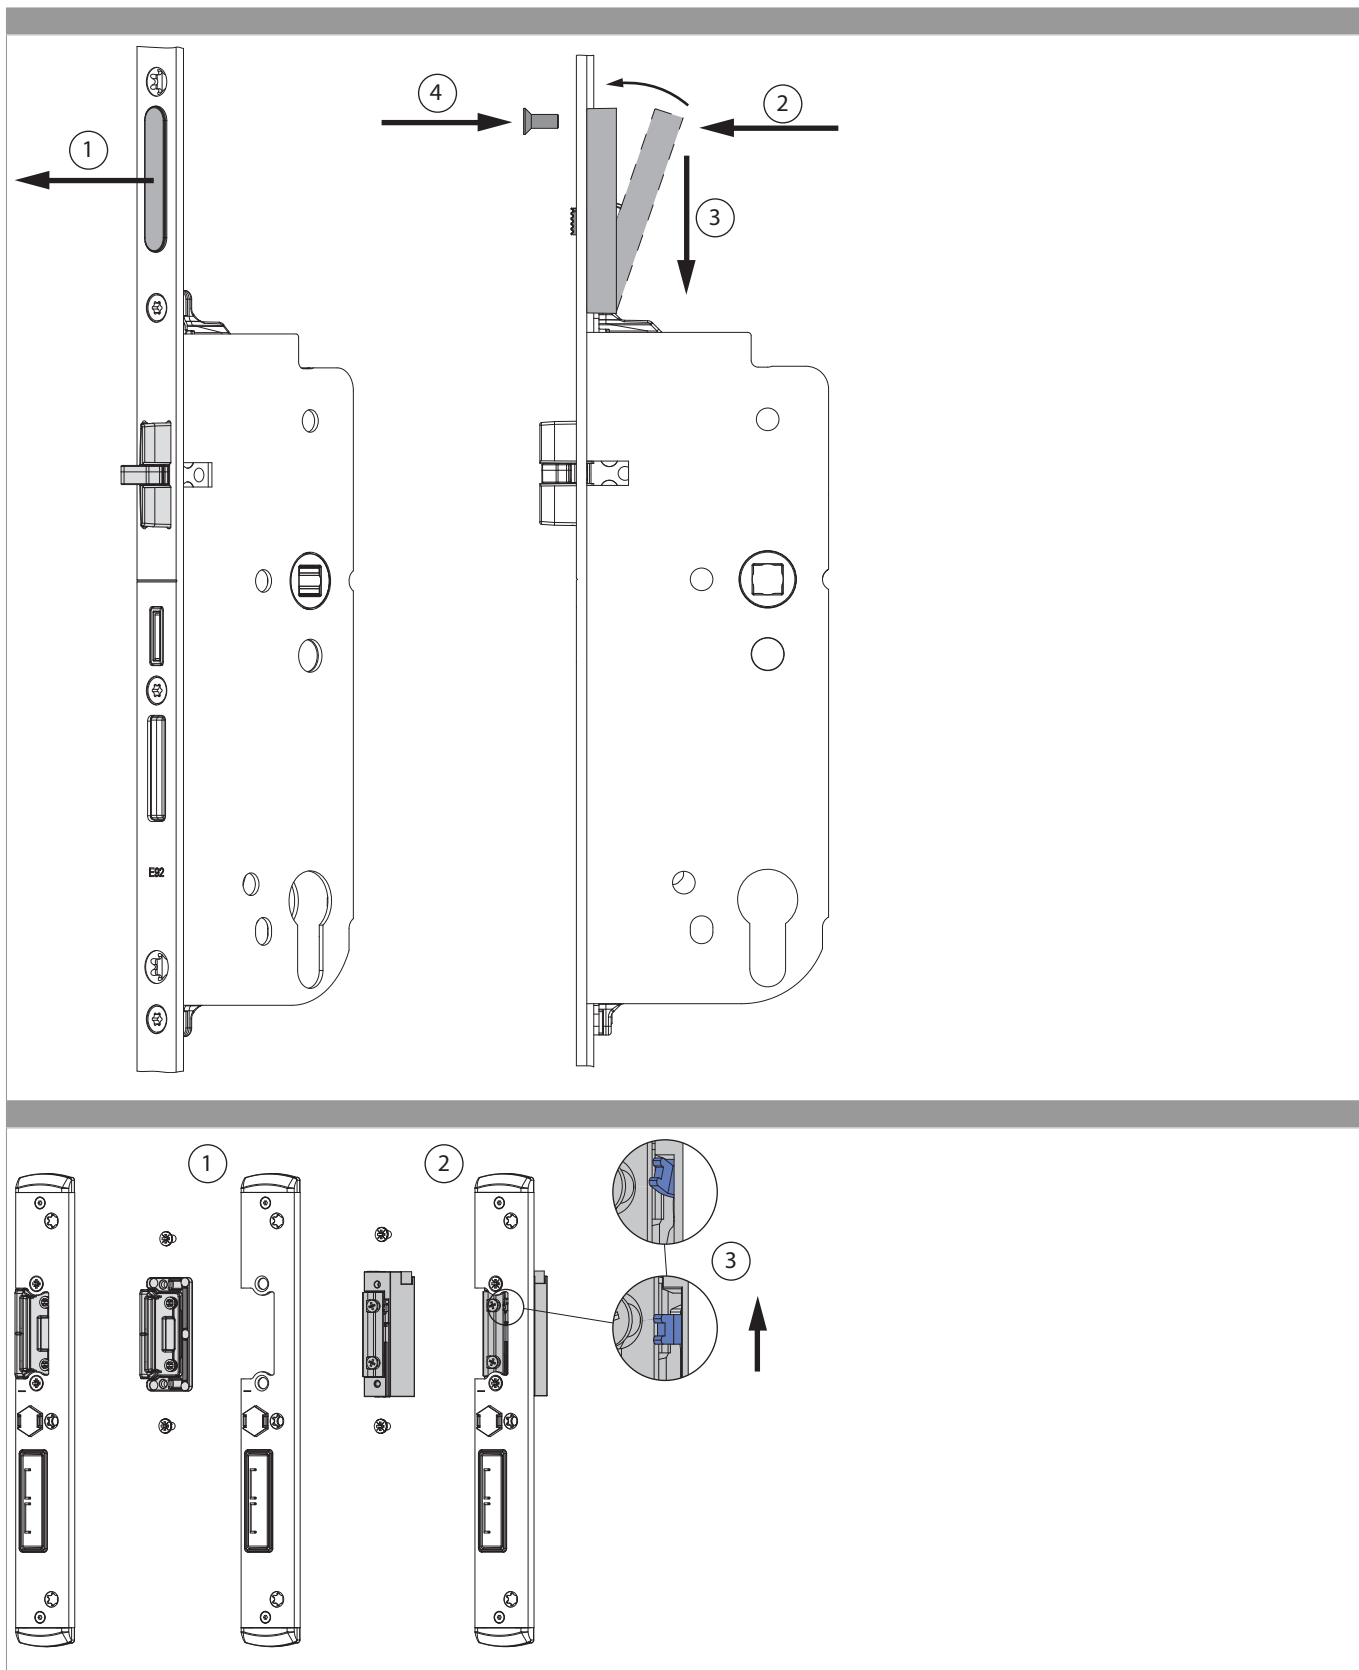





245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980 HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT

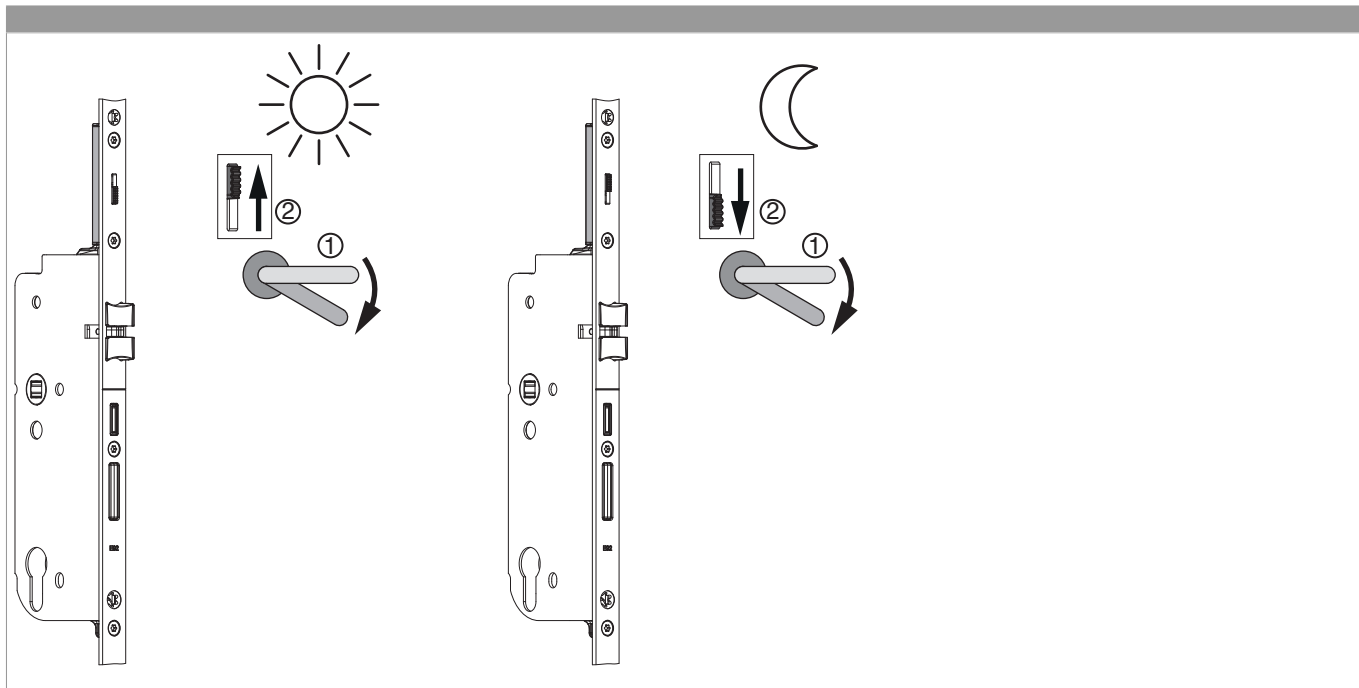


Operating instructions

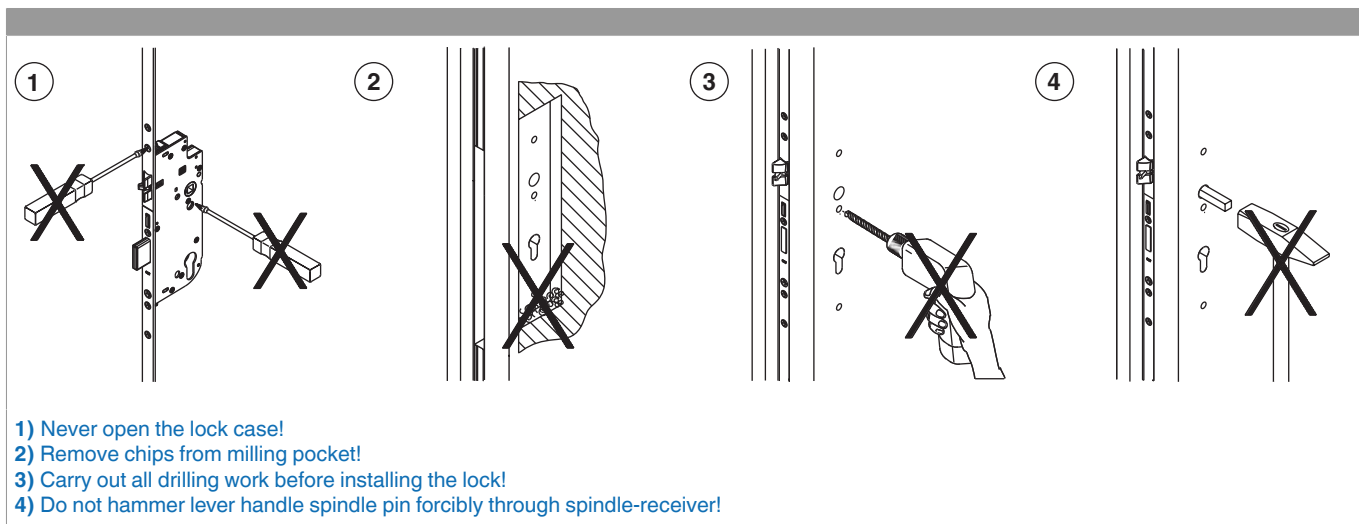


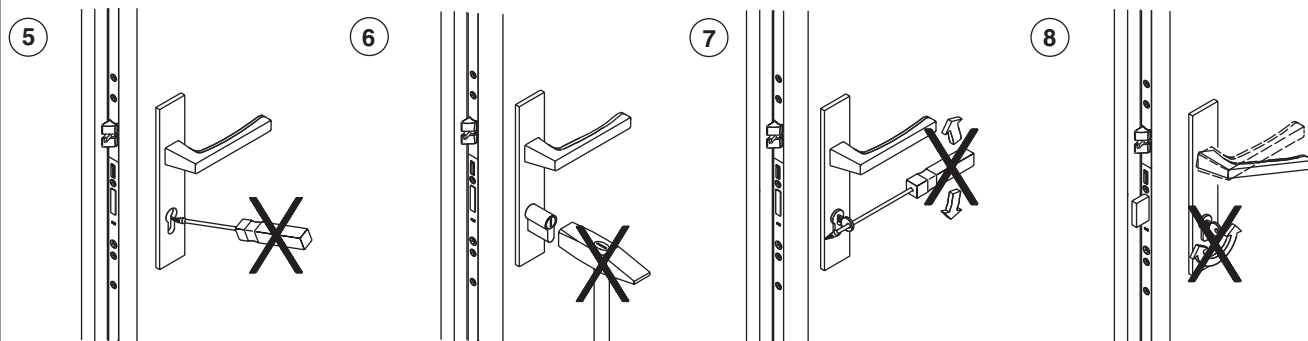

- 5) Only lock doorlock with appropriate universal access key!
- 6) Do not use force when installing the cylinder!
- 7) Do not apply force through external leverage in order to turn the key!
- 8) Do not operate lever handle and key simultaneously!

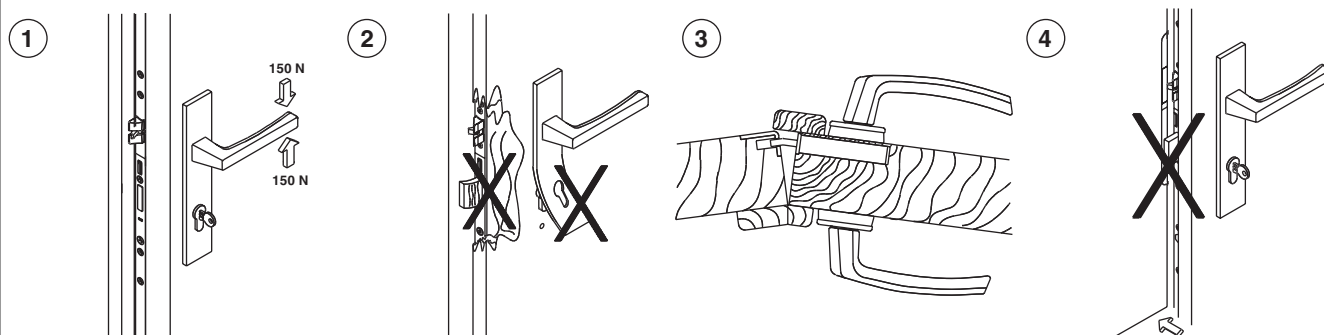



- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!
- 2) If traces of force are visible, the lock must be replaced.
- 3) On double doors, the active door must be opened before the passive door.
- 4) Ensure deadbolt is not protruding when door is open!

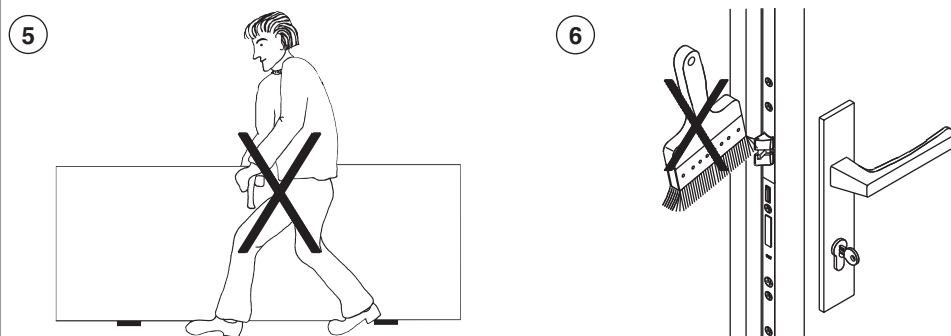

- 5) Do not carry door by lever handle!
- 6) Do not paint or varnish over the lock's deadbolt and latch!



**245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**

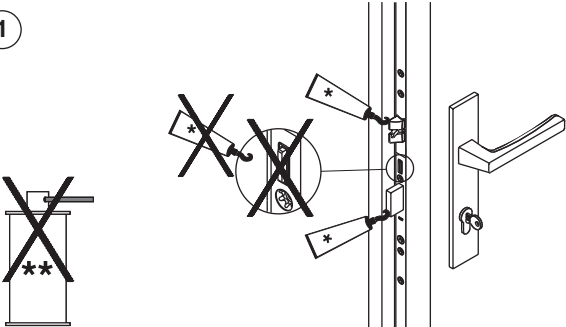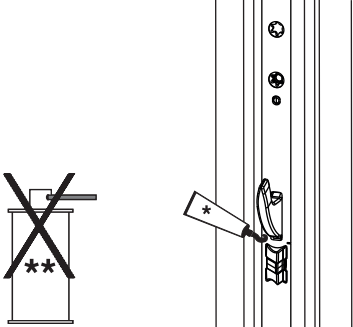① 	② 
1) Latch and deadbolt must be lubricated once a year. The doorlock (lock case) is supplied with a high performance lubricant and DOES NOT require any further lubrication. 2) Multifunctional latches and hooks must be lubricated once a year. * Grease ** Rust remover, silicone spray etc.	
	Lubrication is to be carried out generally only with lubrication grease or technical Vaseline! Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!



**245321 - Door lock A-TS entry92 BS40 PC 2 MF-HO K+980
HH 885 silver square spindle =8 U-1.990x6/24/6 fixed PT**

Use of transport protection devices

