


230630 - Door lock Z-TF entry92 BS35 PC 2 MF-HO K+605 HH 1.050 silver square spindle =8 F-2.000x20 fixed PT

Technical drawing

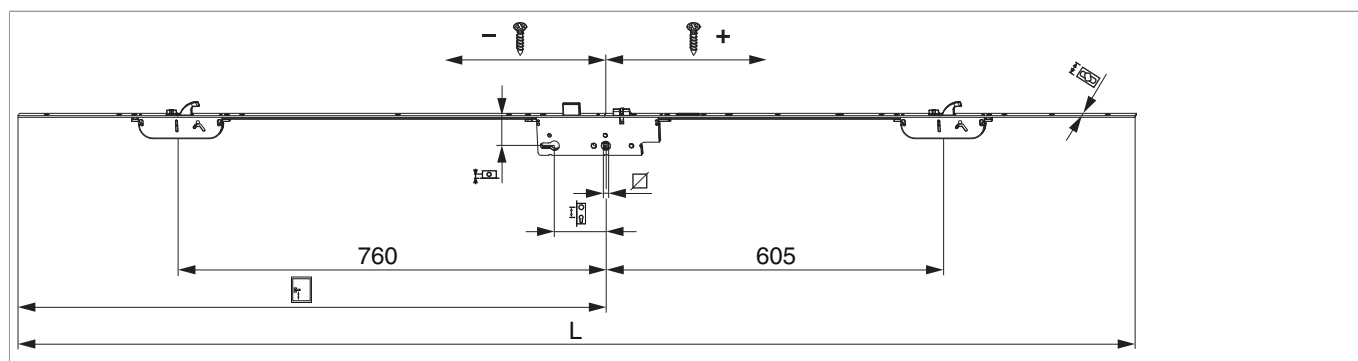


fixed	silver	92	35	8	1.050	1.800 - 2.000	20	L	5			

Screw position table

Nº													
230630	11	-1.000	-870	-650	-371	-172	176,5	309	495	715	800	900	

 Product image





Lock cases






230630 - Door lock Z-TF entry92 BS35 PC 2 MF-HO K+605 HH 1.050 silver square spindle =8 F-2.000x20 fixed PT

Latch conversion


Cranked latch

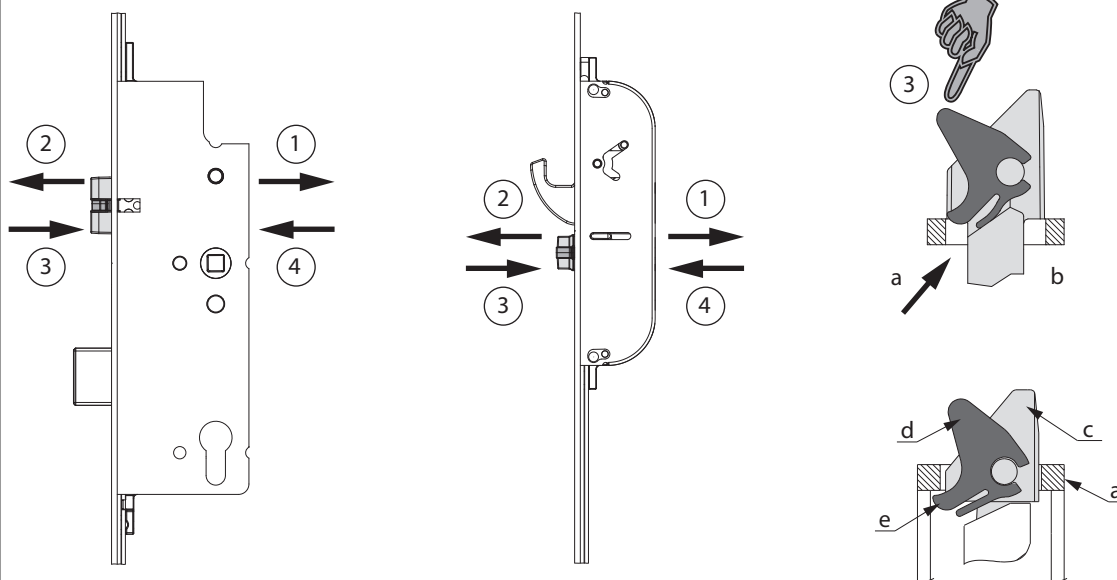

4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert


Operating instructions

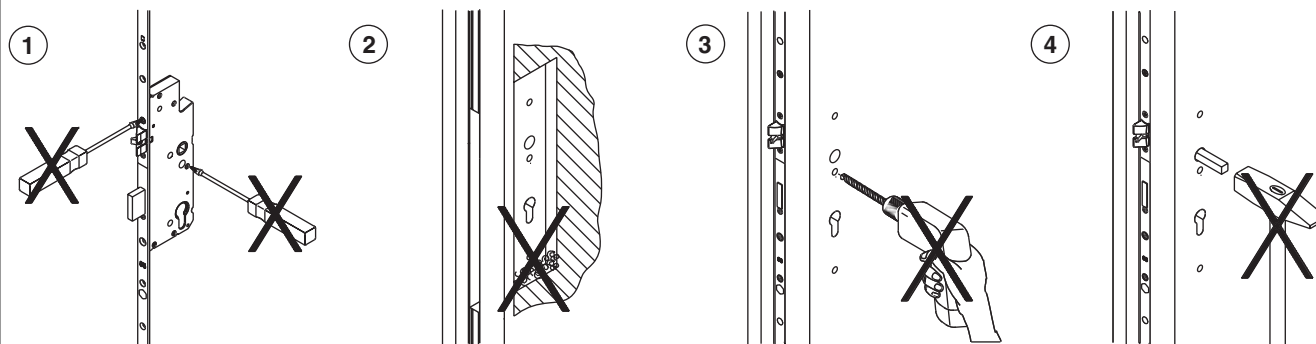


- 1) Never open the lock case!
- 2) Remove chips from milling pocket!
- 3) Carry out all drilling work before installing the lock!
- 4) Do not hammer lever handle spindle pin forcibly through spindle-receiver!




**230630 - Door lock Z-TF entry92 BS35 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

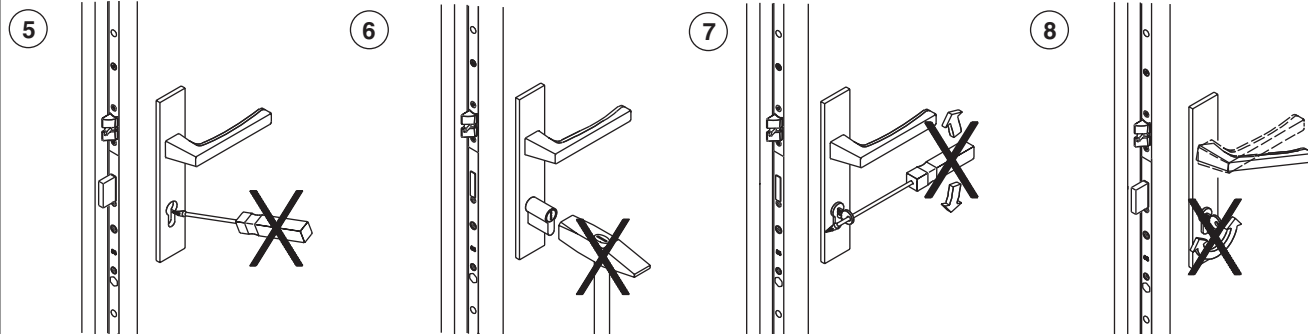

- 5) Do not use force when installing the cylinder!
6) Do not apply force through external leverage in order to turn the key!
7) Do not operate lever handle and key simultaneously!

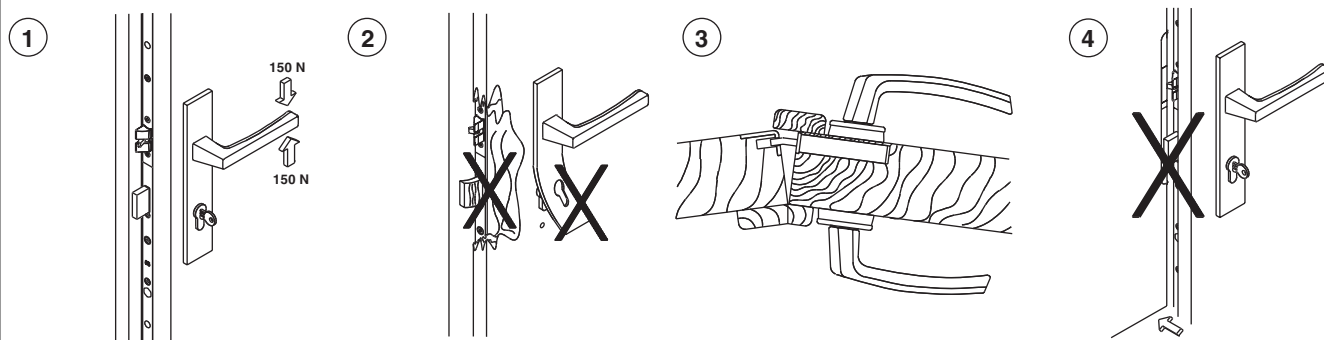

- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!
2) If traces of force are visible, the lock must be replaced.
3) On double doors, the active door must be opened before the passive door.
4) Ensure deadbolt is not protruding when door is open!

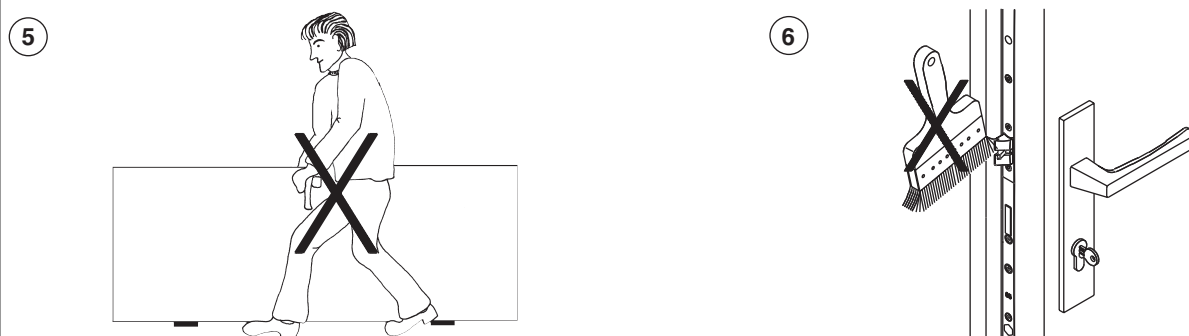

- 5) Do not carry door by lever handle!
6) Do not paint or varnish over the lock's deadbolt and latch!



**230630 - Door lock Z-TF entry92 BS35 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

①	②
1) The doorlock (lock casing) is supplied with a high performance lubricant and DOES NOT require any further lubrication. Latch and deadbolt must be lubricated once a year. 2) Multifunctional latches and i.S. locking cams as well as the connecting rod below must be lubricated once a year! * Grease ** Rust remover, silicone spray etc.	
	Lubrication is to be carried out generally only with lubrication grease or technical Vaseline! Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!



**230630 - Door lock Z-TF entry92 BS35 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

Use of transport protection devices

