


101562 - concealed turn restrictor MM lockable 13 mm offset silver

Technical drawing

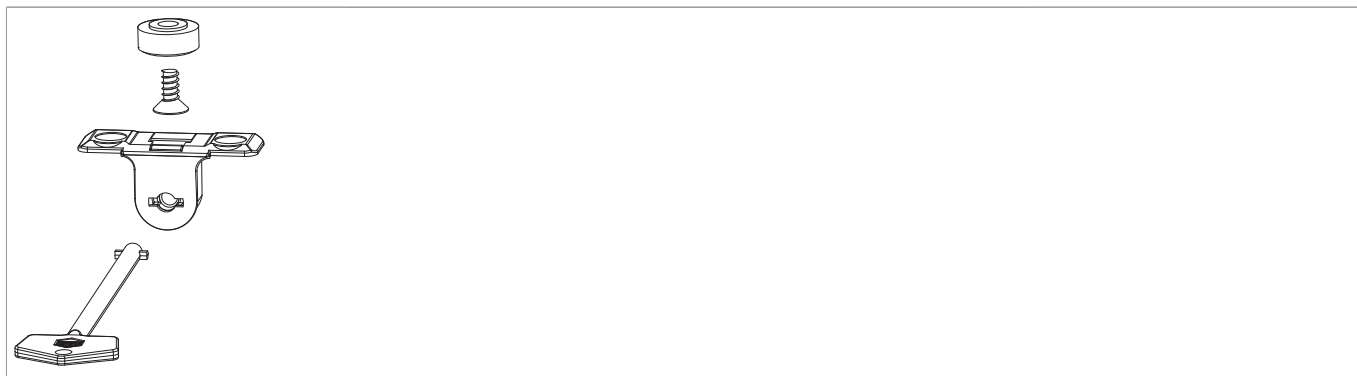


			Nº
silver	lockable 13 mm offset	20	101562 ¹⁾

¹⁾ Box contents: Turn lock, bolt for turn lock, Sped-Form screw, tilt-stay key.

Jigs

			Nº
routing template for turn lock MT/MM	concealed	1	212591


Use of jig

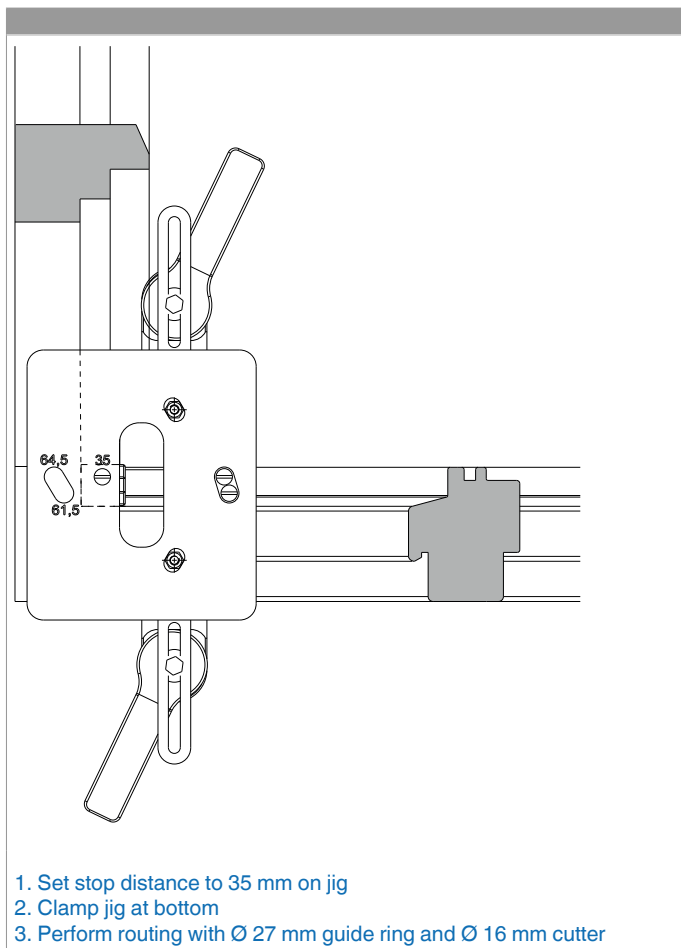



**101562 - concealed turn restrictor MM lockable 13 mm
offset silver**

Drilling and routing pattern

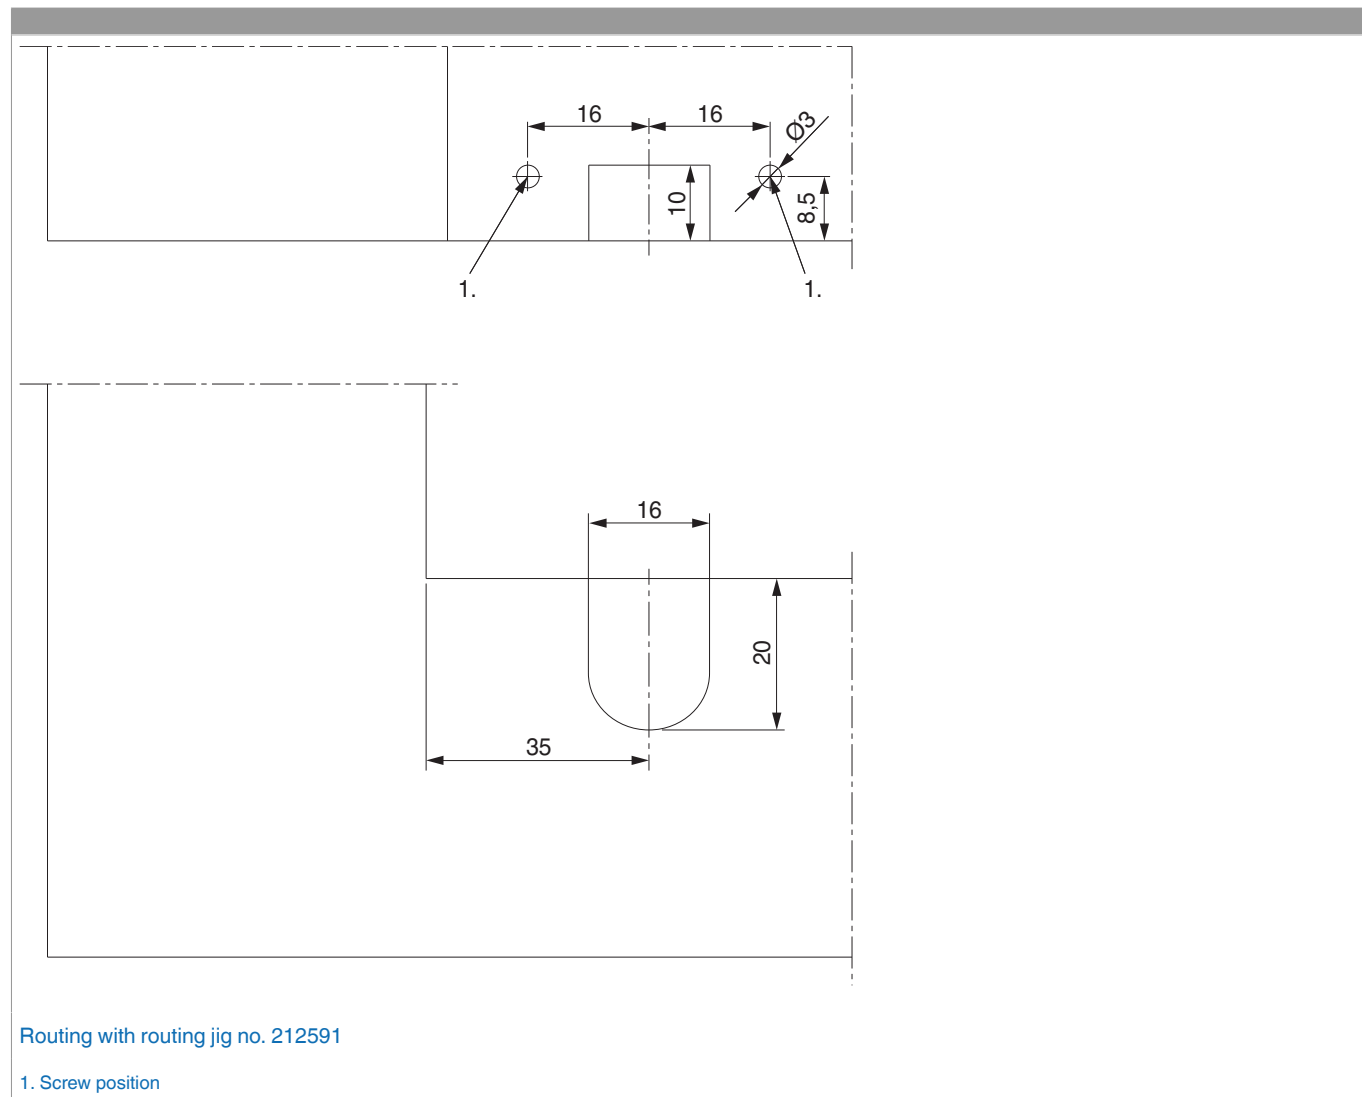




101562 - concealed turn restrictor MM lockable 13 mm offset silver

Installation

Installation of turn lock 13 mm offset

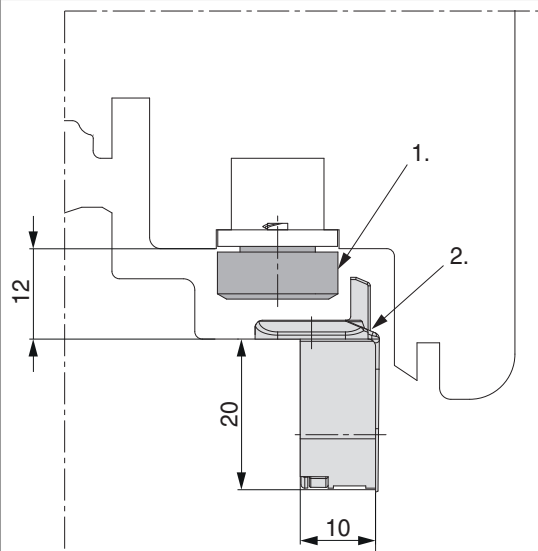

1. Fasten bolt on horizontal corner element with self-tapping screw with 4 Nm max. torque.

2. Position turn lock in milling pocket and fasten.



**101562 - concealed turn restrictor MM lockable 13 mm
offset silver**

View — assembled

