

12070 - turn lock self-catching lockable grey brown RAL 8019 - S

Technical drawing




			Nº
grey brown RAL 8019	turn lock self-catching lockable	20	12070


Jigs

				Nº
Drilling jig for turn lock	self-closing	timber/PVC	10	40157

Use of jig

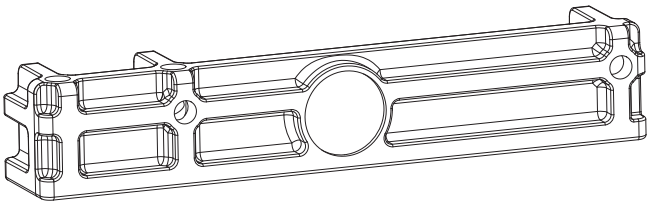

The packing unit for turn locks includes 2 drilling jigs (no. 40157).
Position the jig onto the closed window and pre-drill with Ø 2.5 mm drill.
The part with the deadbolt must be installed on the sash rebate leg.

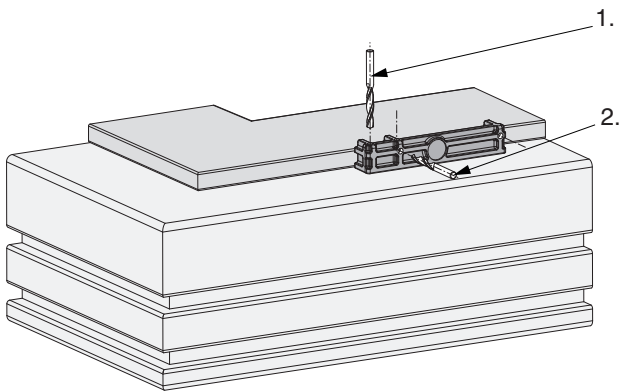


- Holes on frame and sash are drilled with the sash hinged and locked.
- 1. Drilling on frame
- 2. Drilling on sash



12070 - turn lock self-catching lockable grey brown RAL 8019 - S

Dimensions

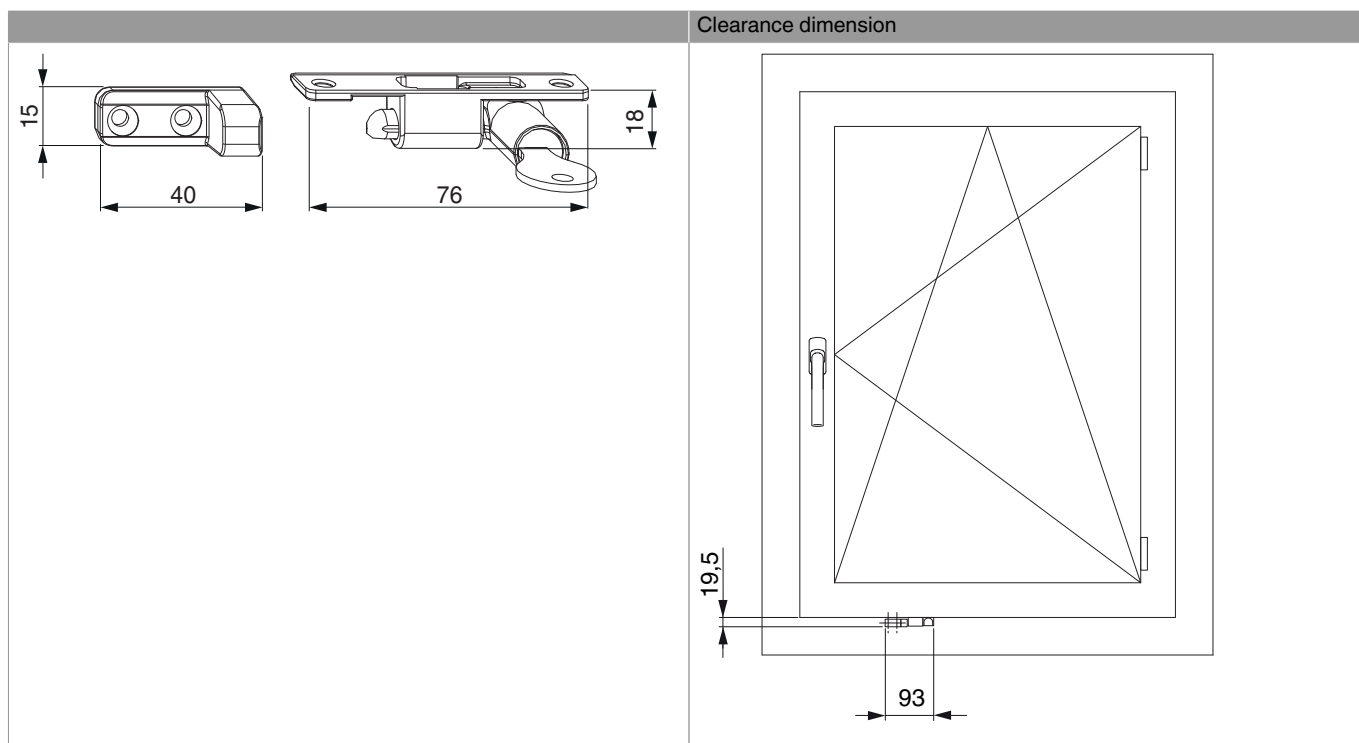



12070 - turn lock self-catching lockable grey brown RAL 8019 - S

Installation

