


203696 - balcony-door lock B-TV with latch with 2 i.S. cams E92 PC BS28 silver MM L=1.347 fixed handle height

Technical drawing

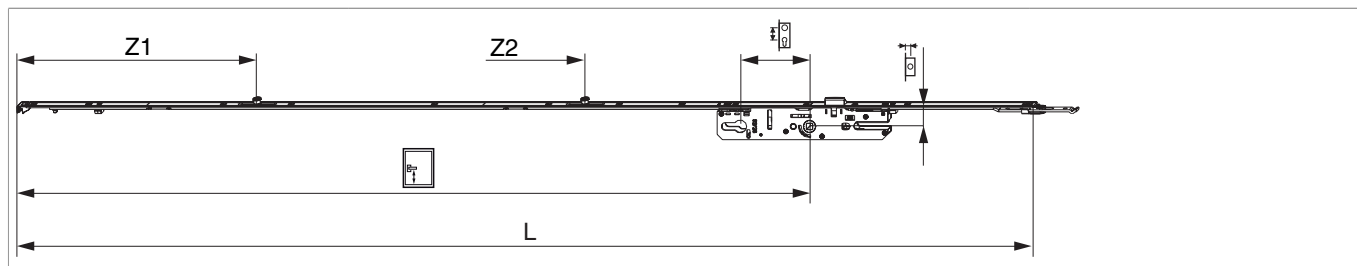

						L		Nº
MM fixed handle height	silver	28	8	1.050	92	1.347	5	203696 ¹⁾

¹⁾ You will find faceplate extensions in the chapter Accessories

Screw position table

Nº											
203696	9	20	93	272	361	551	702	796	1.179	1.340	

Cam position table

Nº		Z1	Z2	
203696	2	316	750	


Product image





203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height


Drilling and routing pattern

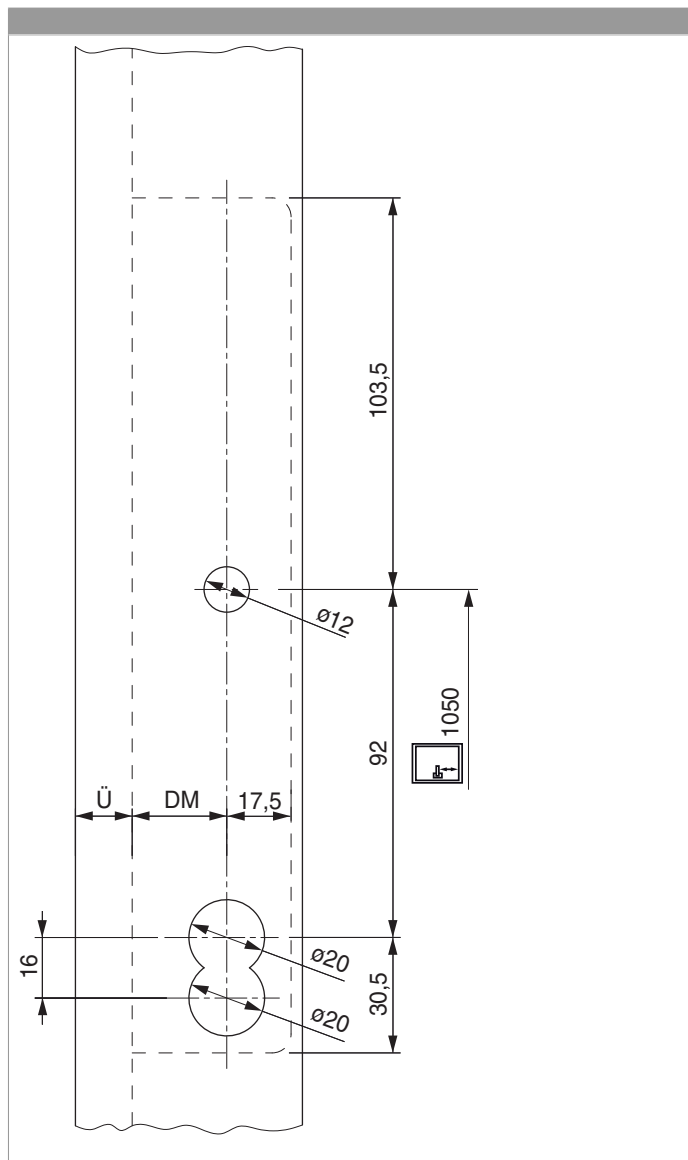



**203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height**

Dimensions of lock case B-TV

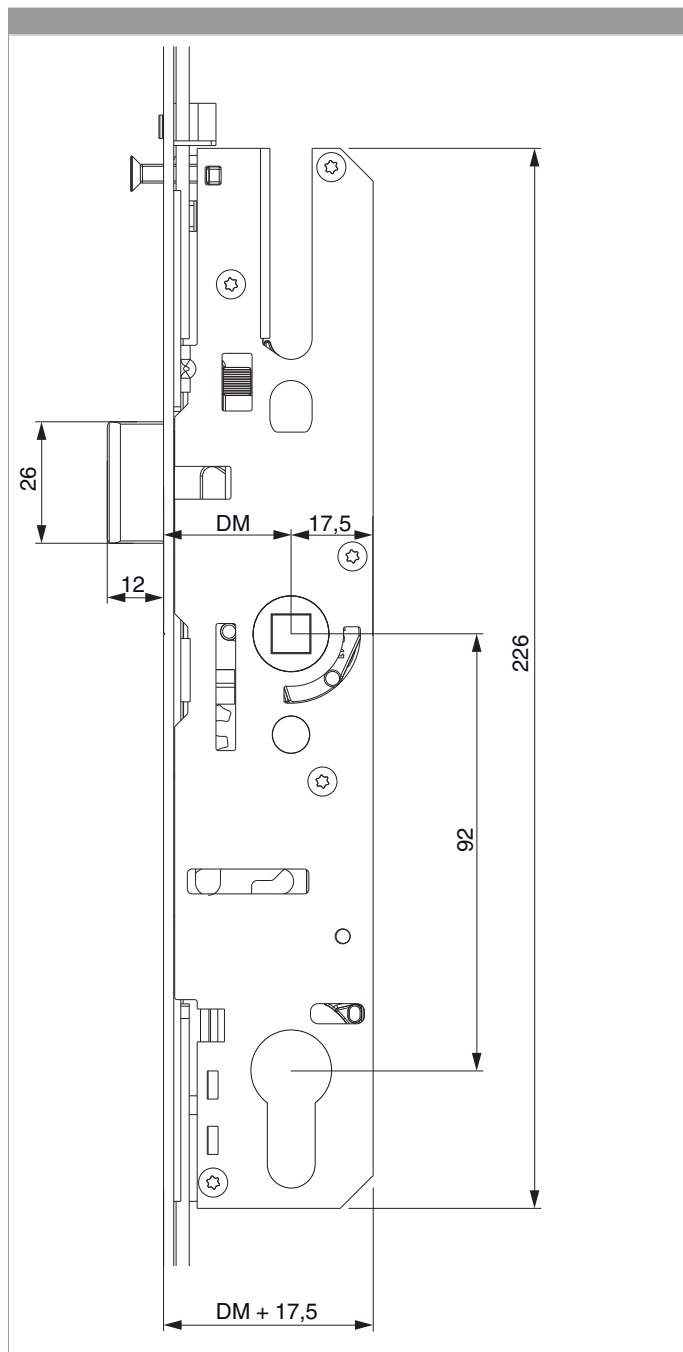



203696 - balcony-door lock B-TV with latch with 2 i.S. cams E92 PC BS28 silver MM L=1.347 fixed handle height

Milling width for lock case B-TV at least 15.5 mm


Caution: Never open lock case!

Drill holes for handle set prior to installation of door lock.


- Not compatible with escutcheon cover sets!
- A lever handle set with handles on both inside and outside must be used.

Snap joint

Engage snap joint

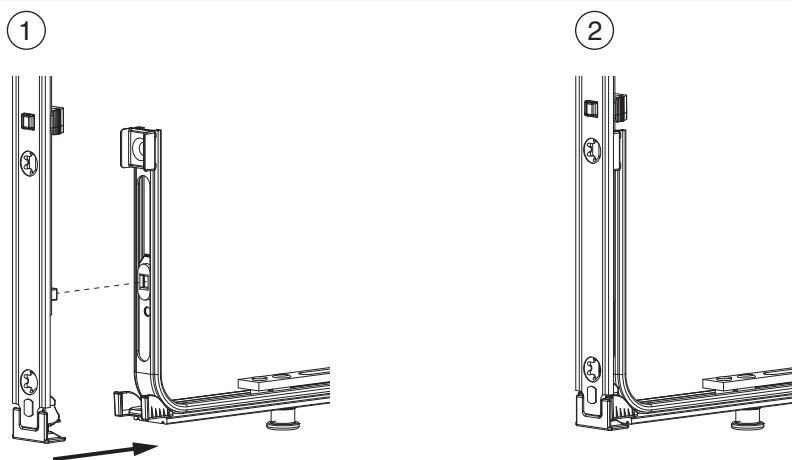


Disengage snap joint

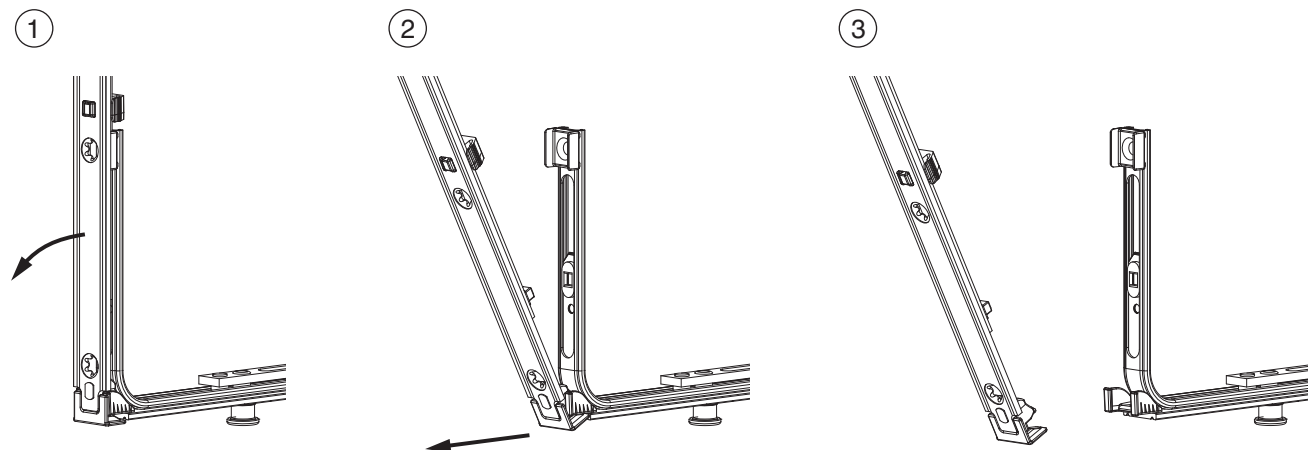



**203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height**


Latch conversion

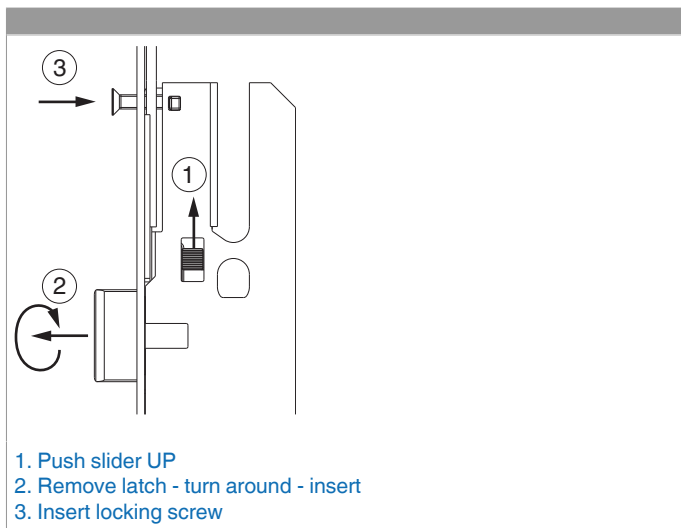



**203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height**


Hardware overviews

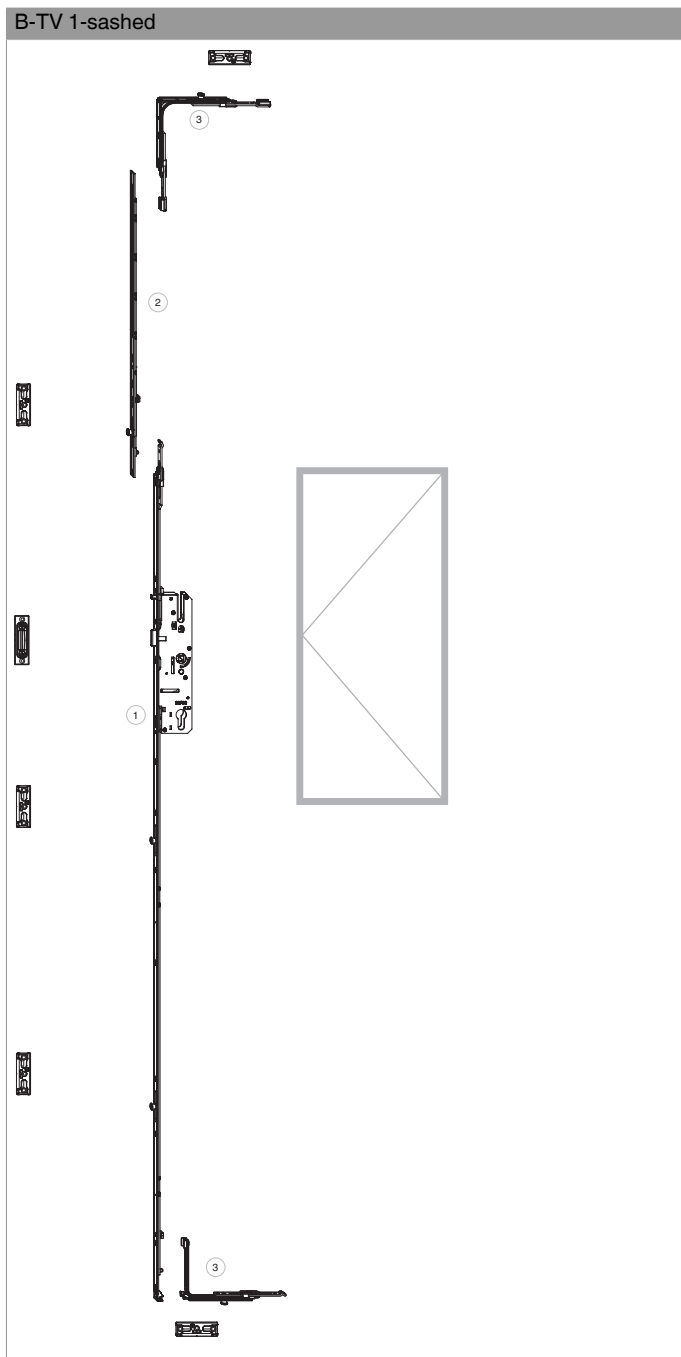



**203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height**


B-TV 2-sashed shootbolt

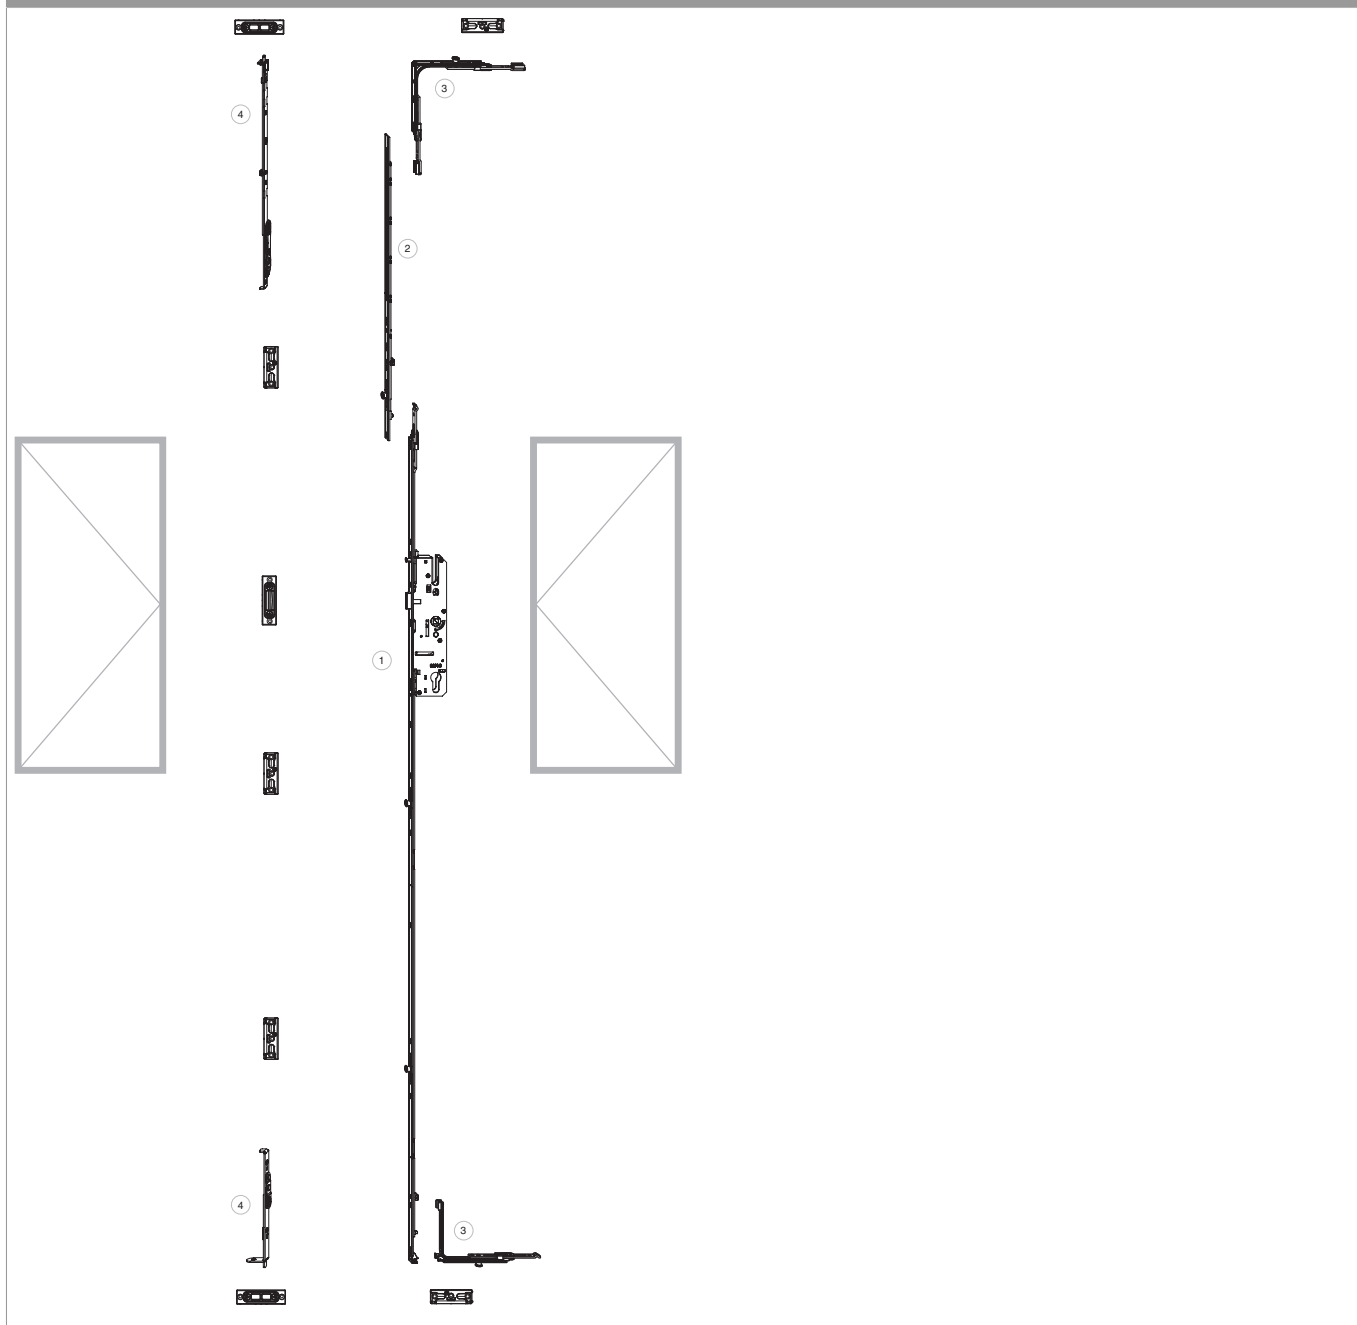



**203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height**


B-TV 2-sashed end pieces

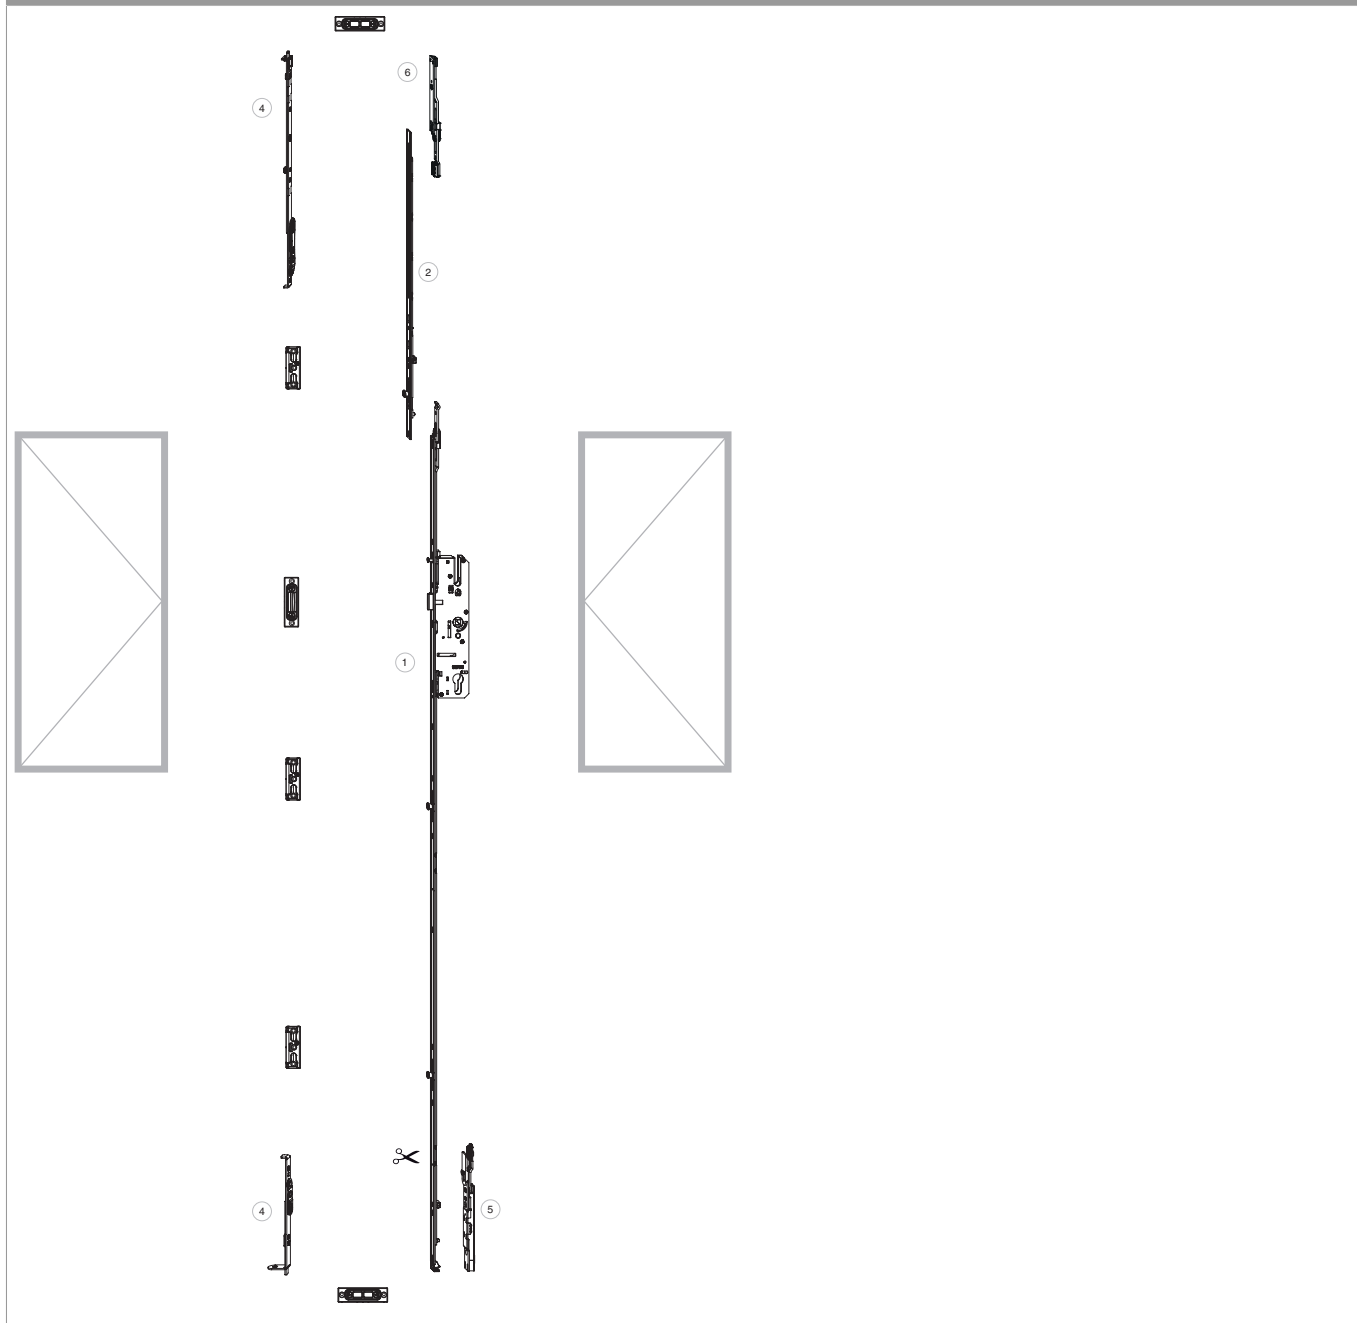



**203696 - balcony-door lock B-TV with latch with 2 i.S.
cams E92 PC BS28 silver MM L=1.347 fixed handle height**

B-TV 2-sashed French casement drive gear

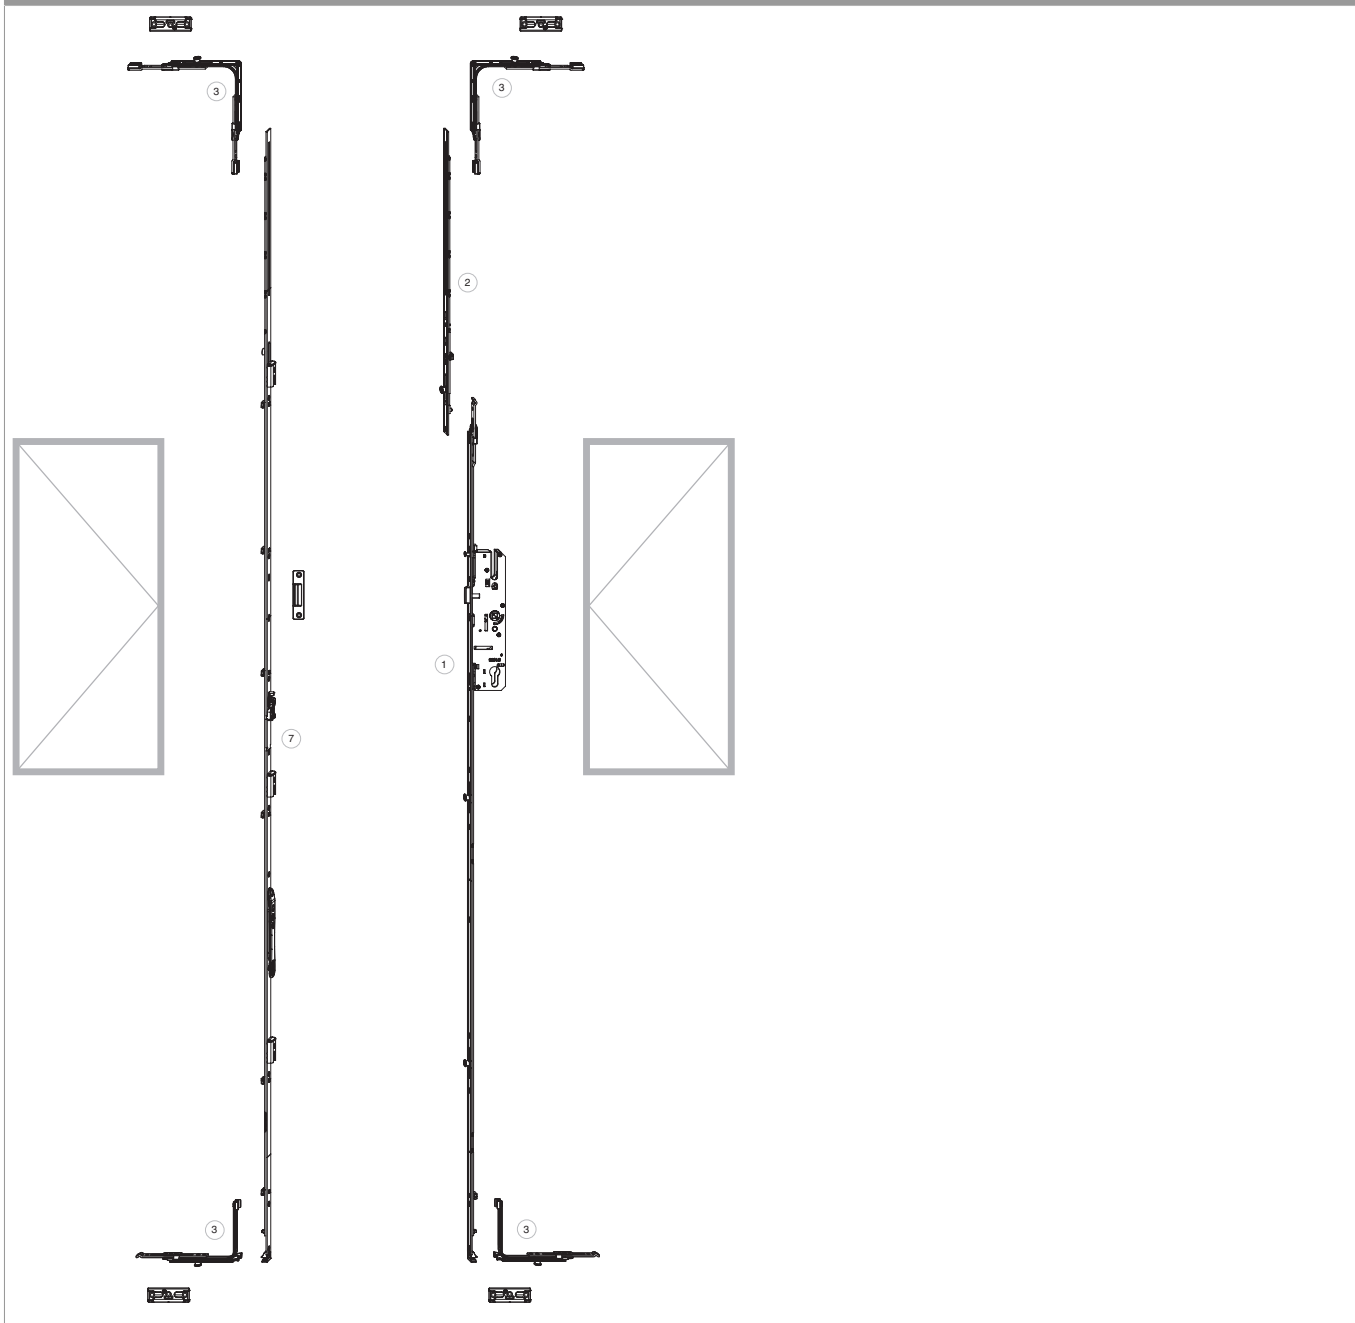




203696 - balcony-door lock B-TV with latch with 2 i.S. cams E92 PC BS28 silver MM L=1.347 fixed handle height

Symbols

1. Balcony door locks B-TV
2. Faceplate extensions B-TV
3. Corner elements
4. Shootbolts
5. Reverse-action bottom end pieces with shootbolt protrusion
6. Top end pieces with shootbolt protrusion for espagnolettes
7. French casement drive gear for Eurogroove FHH

Gasket compression adjustment

i.S. locking cams and standard locking cams

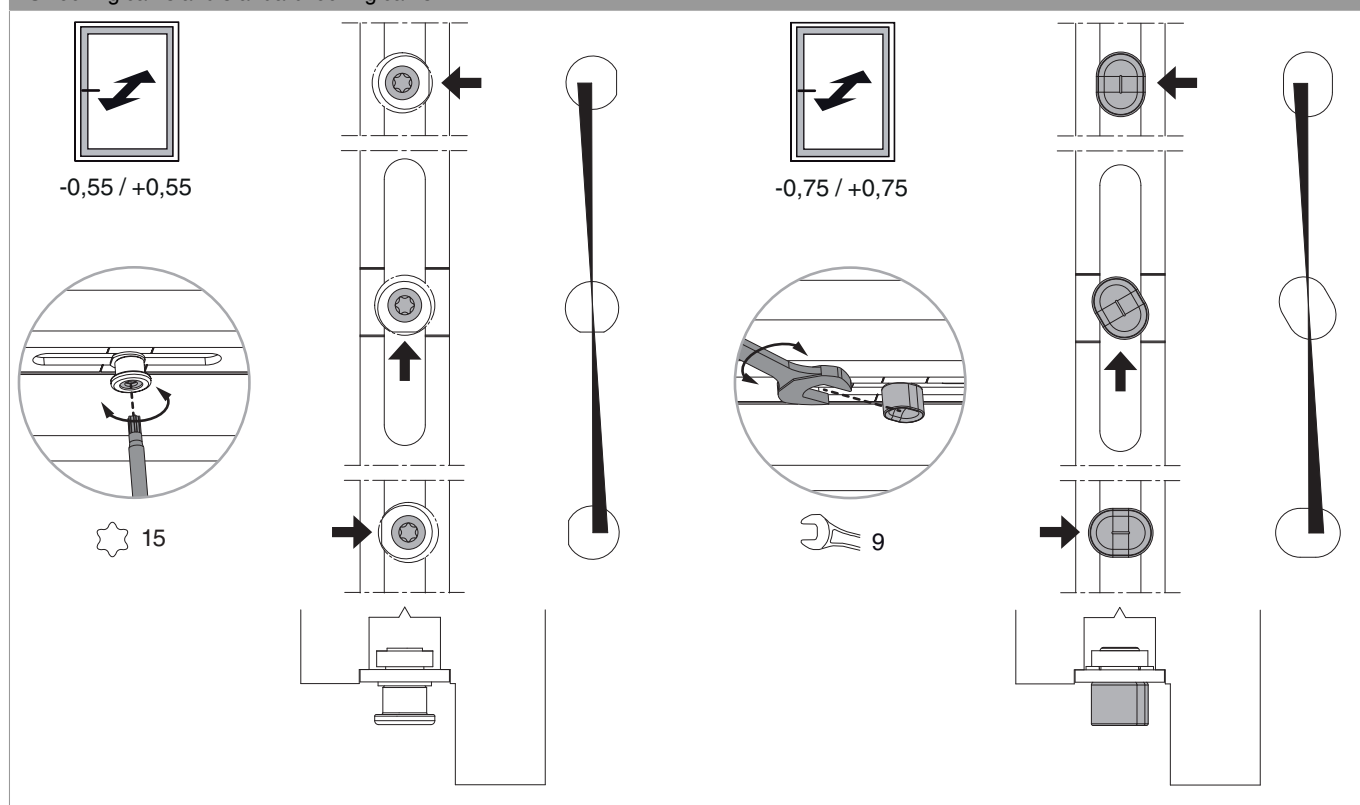

Operation

Open	Shut	Lock