


245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605 HH 1.050 silver square spindle =8 F-2.000x20 fixed PT

Technical drawing

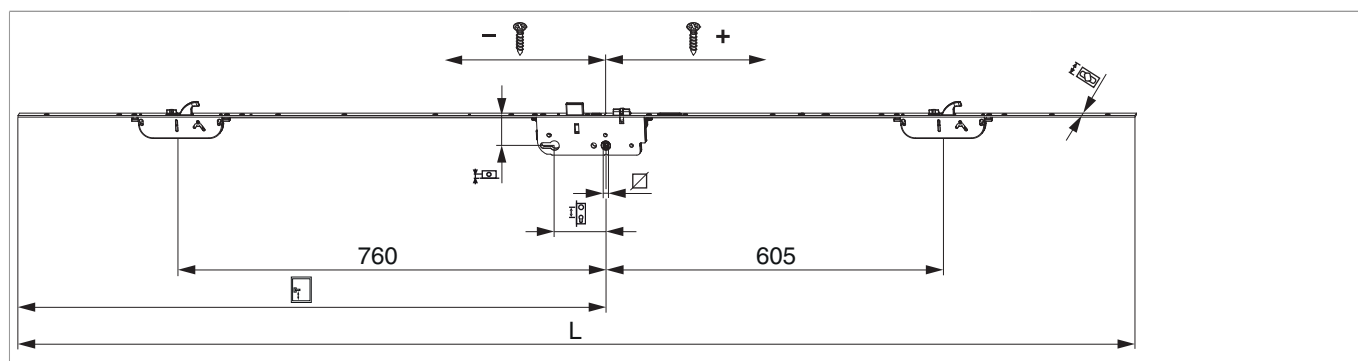

fixed	silver	92	65	8	1.050	1.800 - 2.000	20	L	5	No	245156				

Screw position table

No																
245156	13	-1.000	-870	-650	-585,6	-466,9	-304	-168	143,5	300	495	715	800	900		

Product image






245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT

Routing

Lock cases

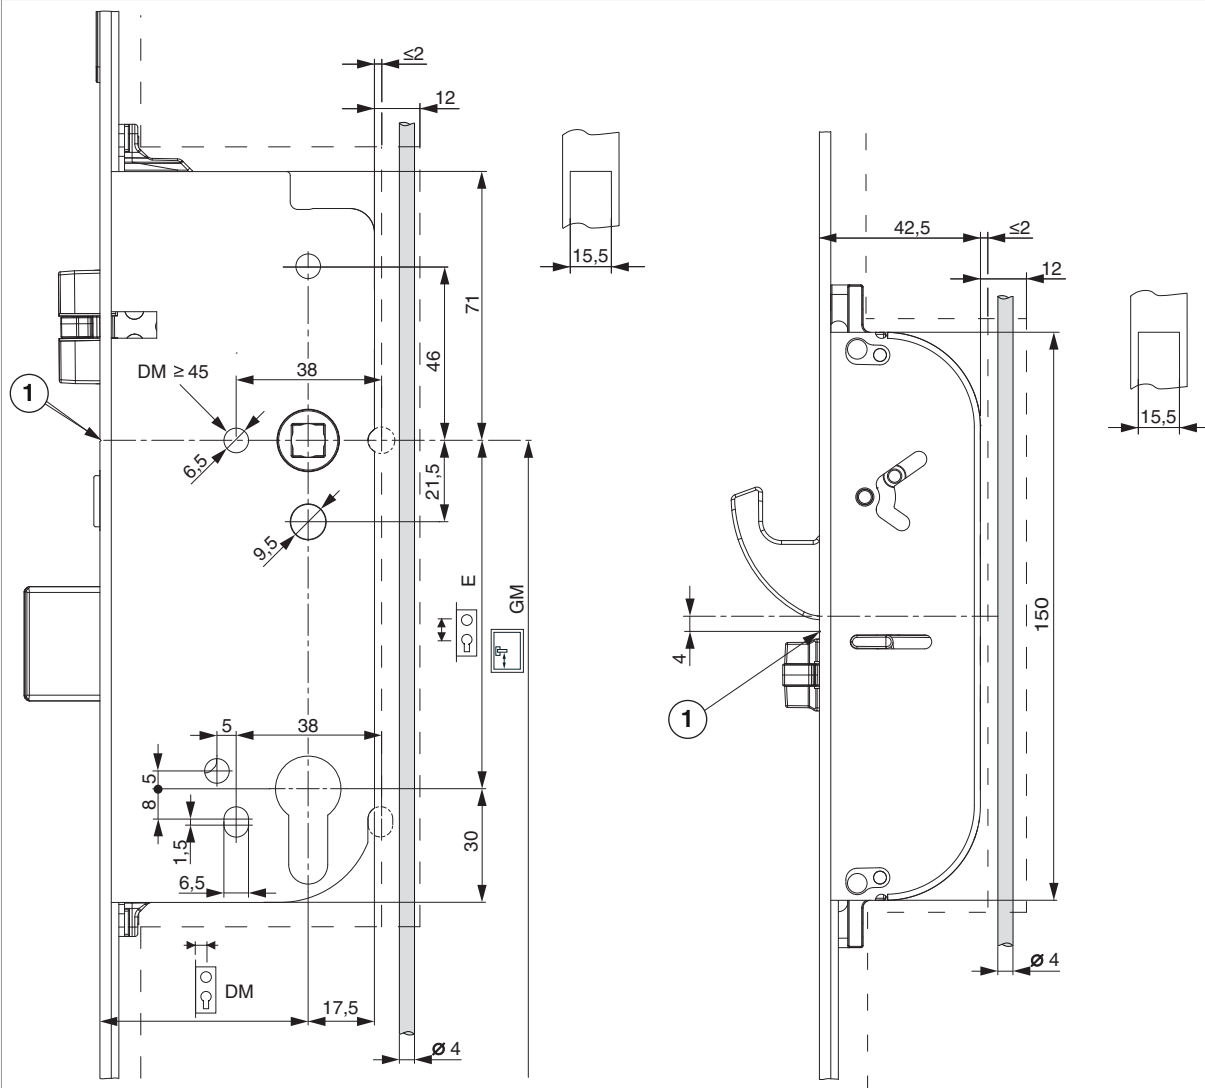


1) faceplate notch



245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605 HH 1.050 silver square spindle =8 F-2.000x20 fixed PT

Latch conversion

Cranked latch

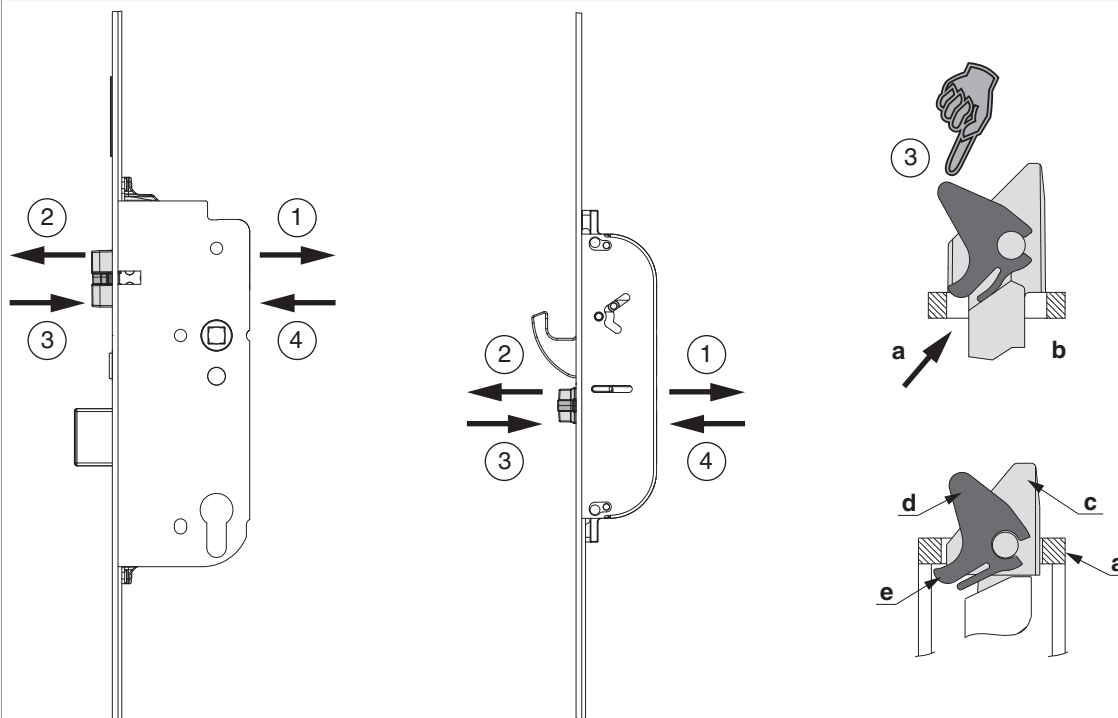


4) Replace screw (torque min. 1.5 Nm up to max. 2 Nm).
Carry out operational check!

- a) Faceplate
- b) Faceplate recess
- c) Cranked latch
- d) Insert leg of latch insert
- e) Latch insert




**245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

mounting instructions

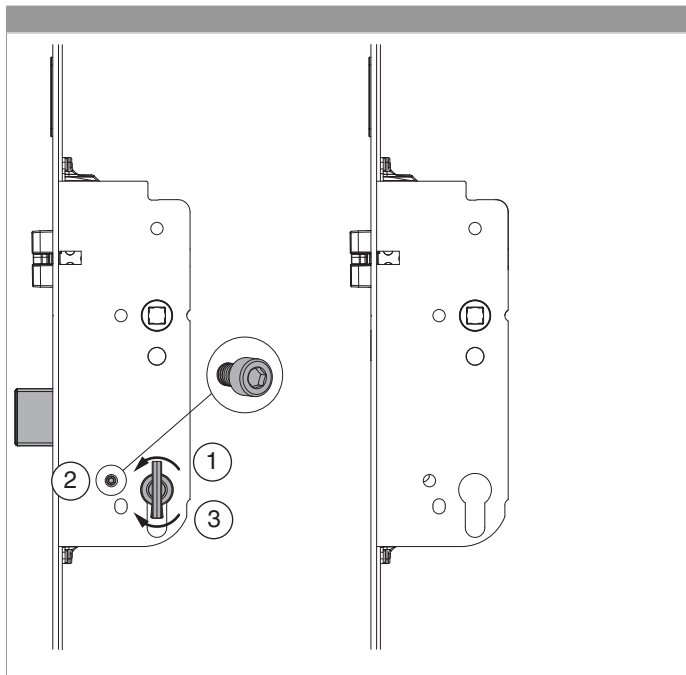




**245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

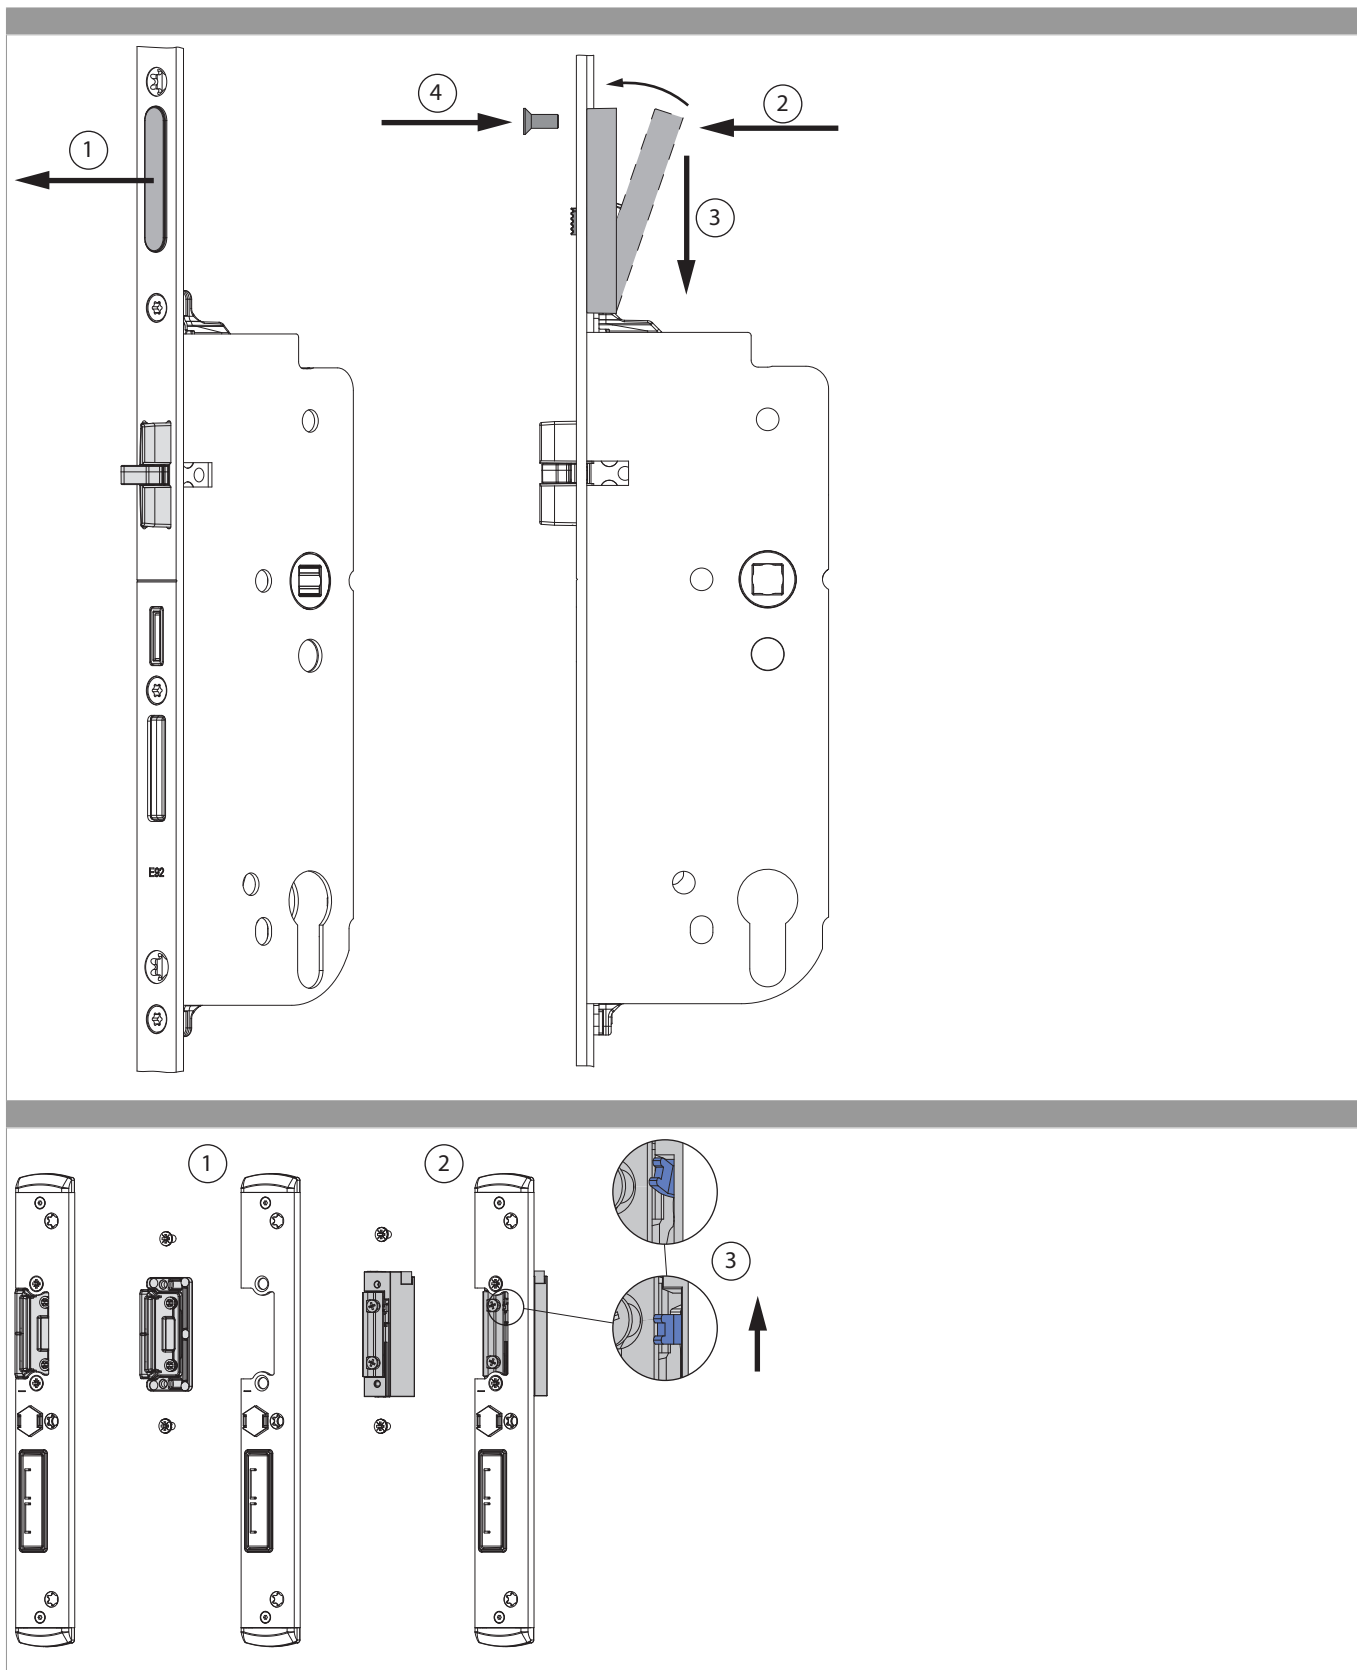





**245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

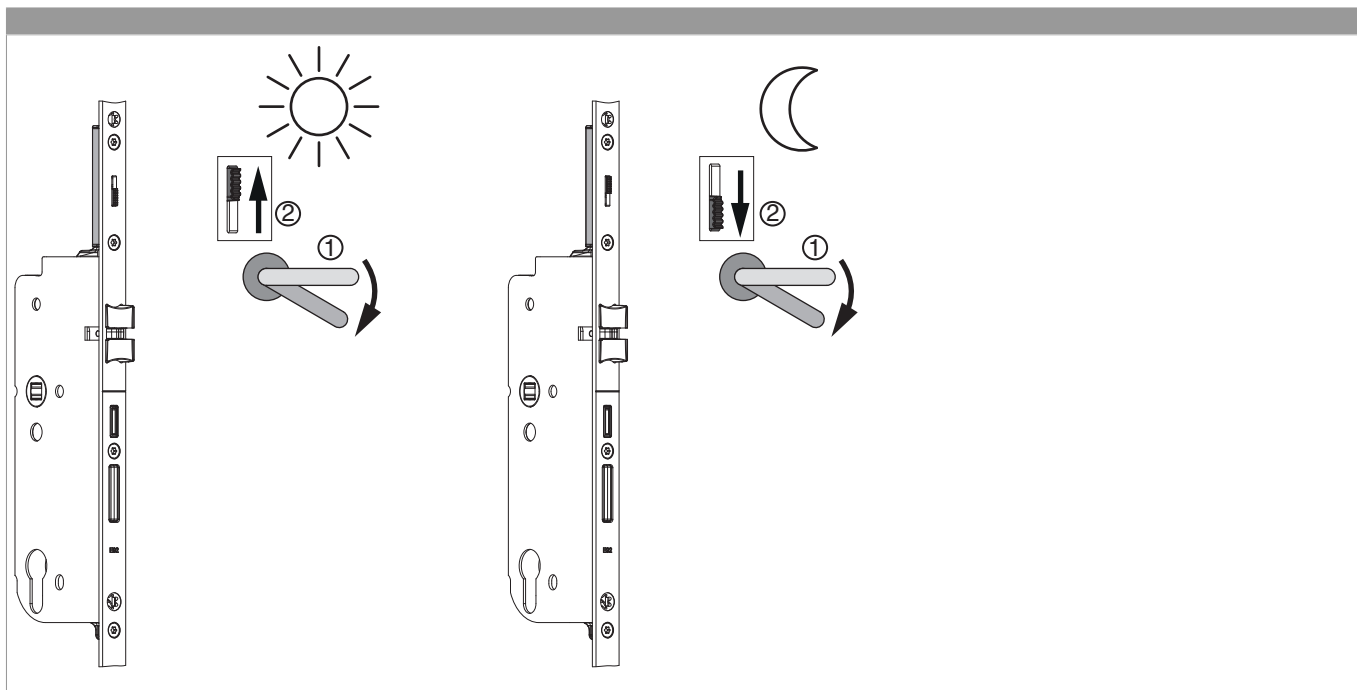


Operating instructions

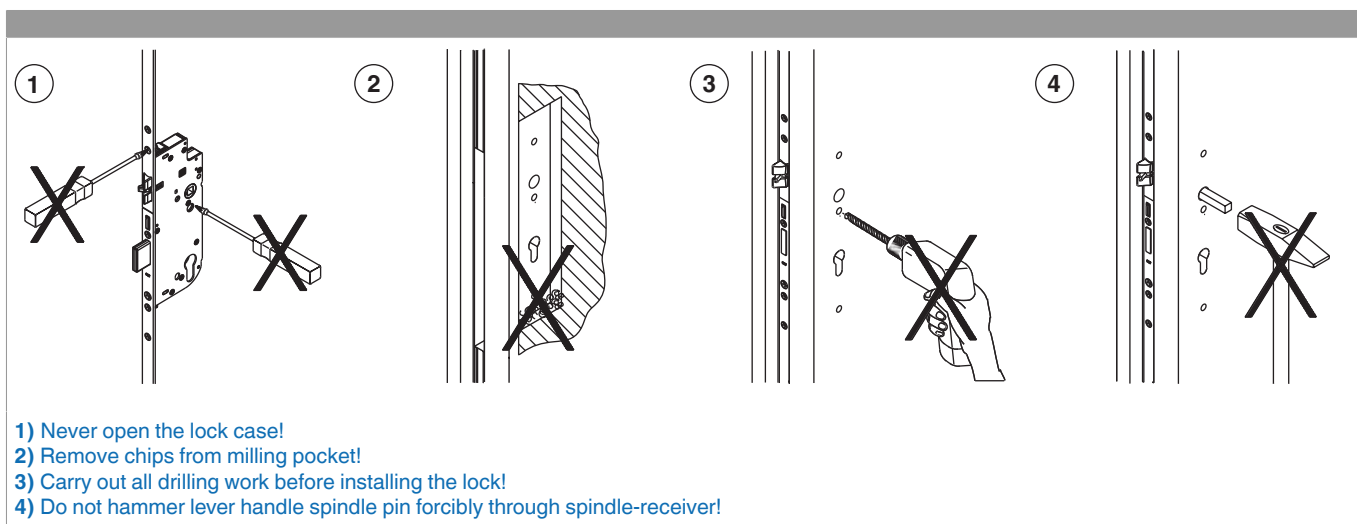


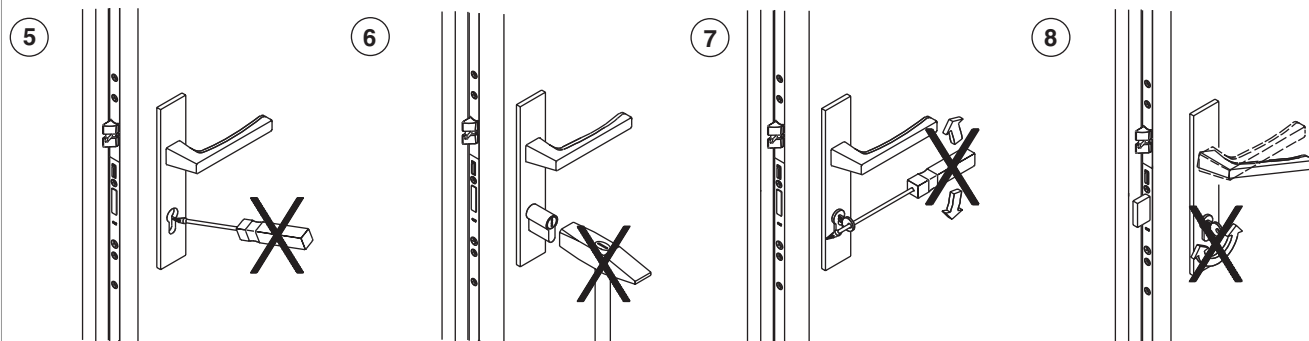

- 5) Only lock doorlock with appropriate universal access key!
- 6) Do not use force when installing the cylinder!
- 7) Do not apply force through external leverage in order to turn the key!
- 8) Do not operate lever handle and key simultaneously!

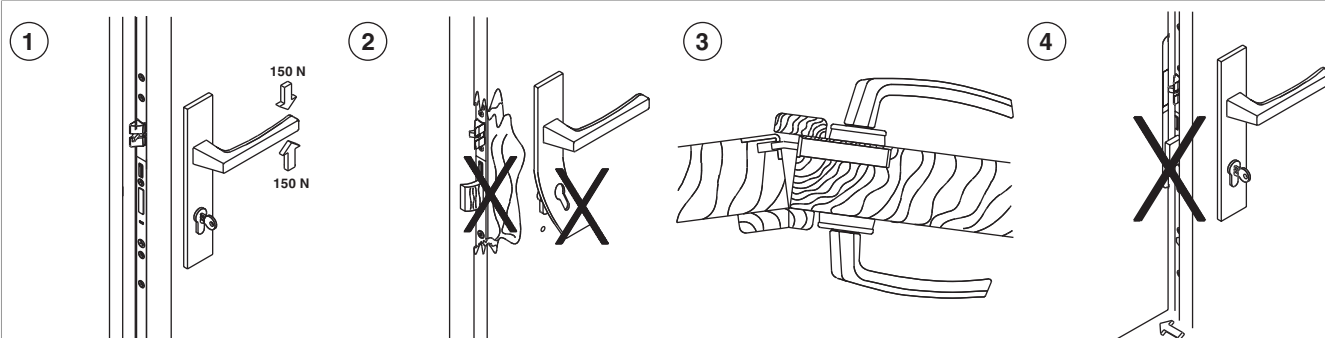



- 1) Apply a maximum force of 150 Nm in the operation direction (on the lever handle)!
- 2) If traces of force are visible, the lock must be replaced.
- 3) On double doors, the active door must be opened before the passive door.
- 4) Ensure deadbolt is not protruding when door is open!

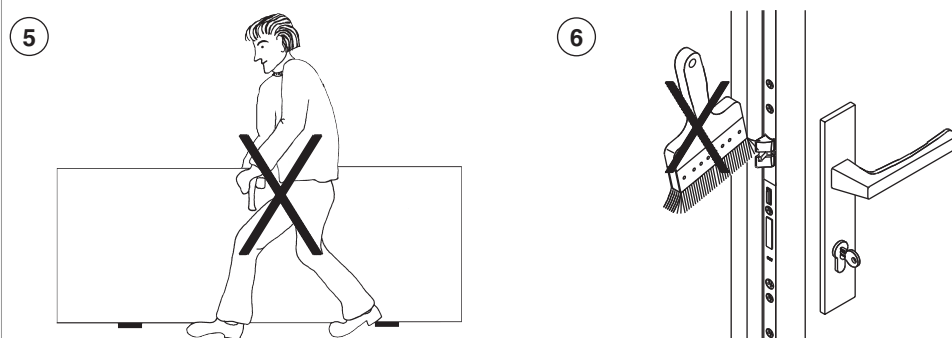

- 5) Do not carry door by lever handle!
- 6) Do not paint or varnish over the lock's deadbolt and latch!



**245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

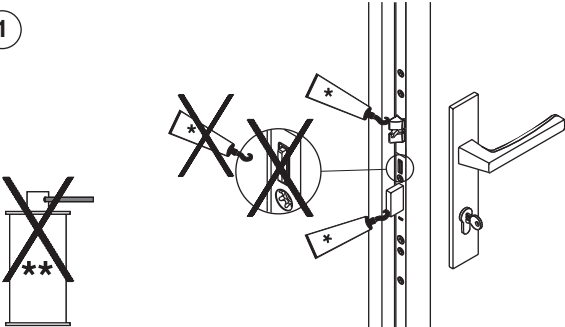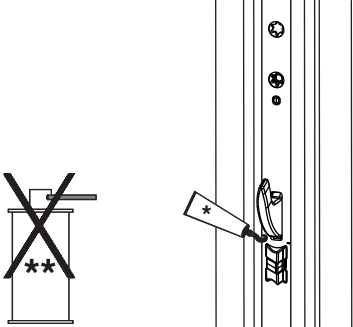① 	② 
1) Latch and deadbolt must be lubricated once a year. The doorlock (lock case) is supplied with a high performance lubricant and DOES NOT require any further lubrication. 2) Multifunctional latches and hooks must be lubricated once a year. * Grease ** Rust remover, silicone spray etc.	
	Lubrication is to be carried out generally only with lubrication grease or technical Vaseline! Do not use any lubrication oils, rust removers, silicone sprays, WD40 etc.!



**245156 - Door lock A-TS entry92 BS65 PC 2 MF-HO K+605
HH 1.050 silver square spindle =8 F-2.000x20 fixed PT**

Use of transport protection devices

